

# Attachment 2 Photo documentation



Product: Solar Grid-tied Inverter

Type: SOFAR 3300TL-G3



Figure 1. General view

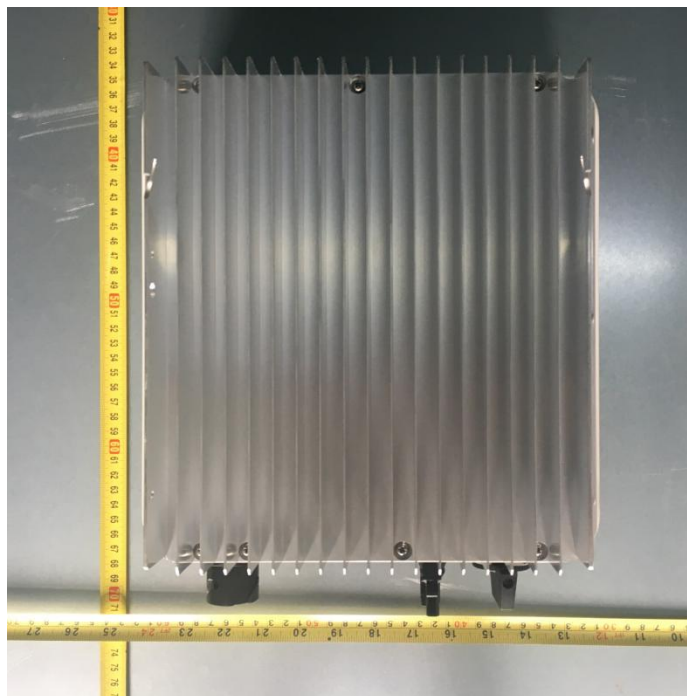


Figure 2. Back view

# Attachment 2 Photo documentation



Product: Solar Grid-tied Inverter

Type: SOFAR 3300TL-G3

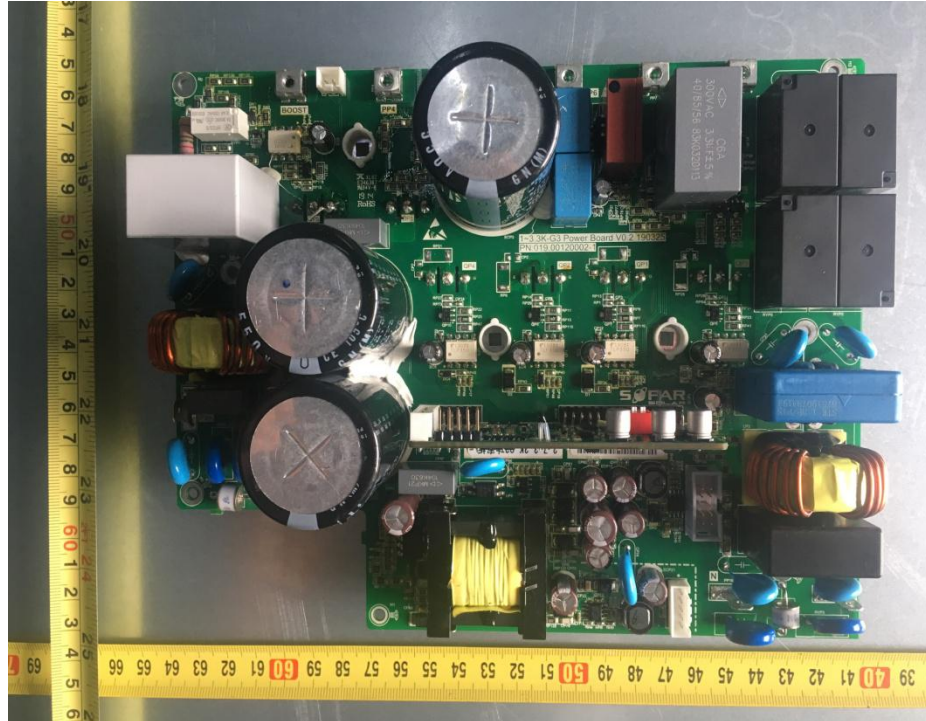


Figure 3. Front view of Main board

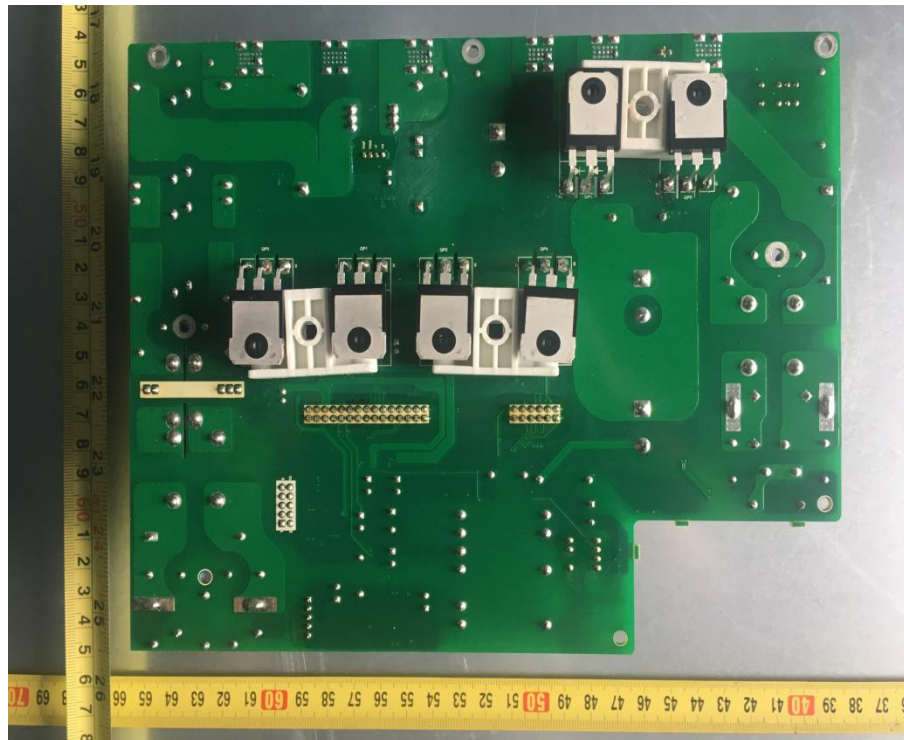


Figure 4. Back view of Main board

# Attachment 2 Photo documentation



Product: Solar Grid-tied Inverter  
Type: SOFAR 3300TL-G3

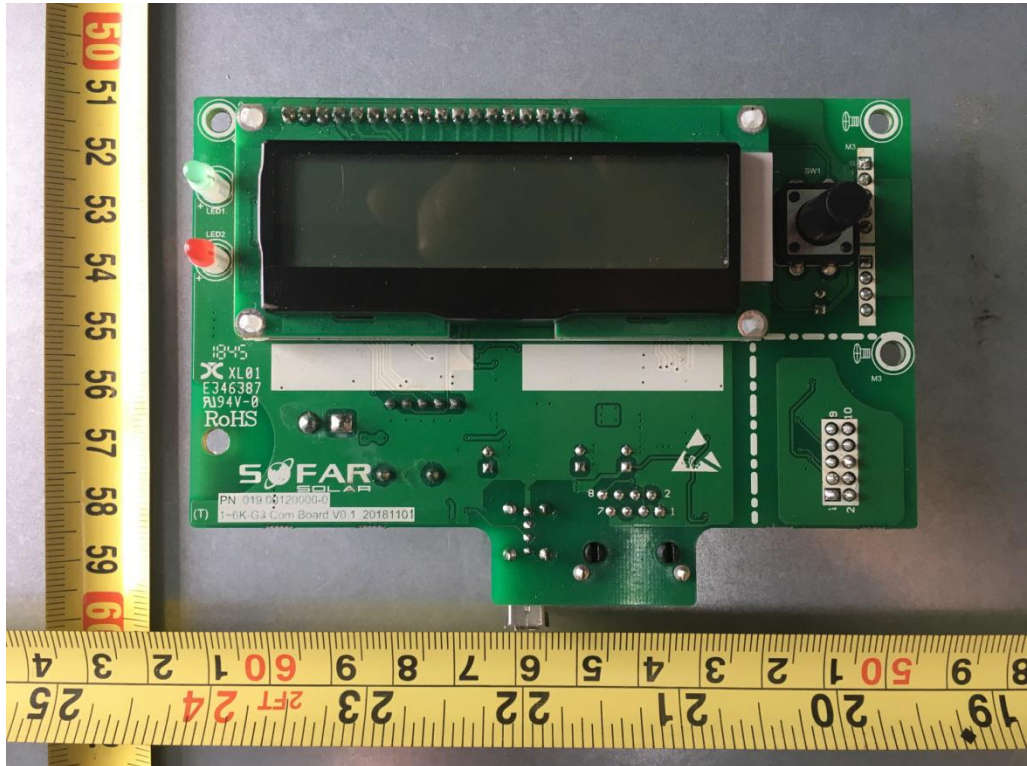


Figure 5. Front View of Display board

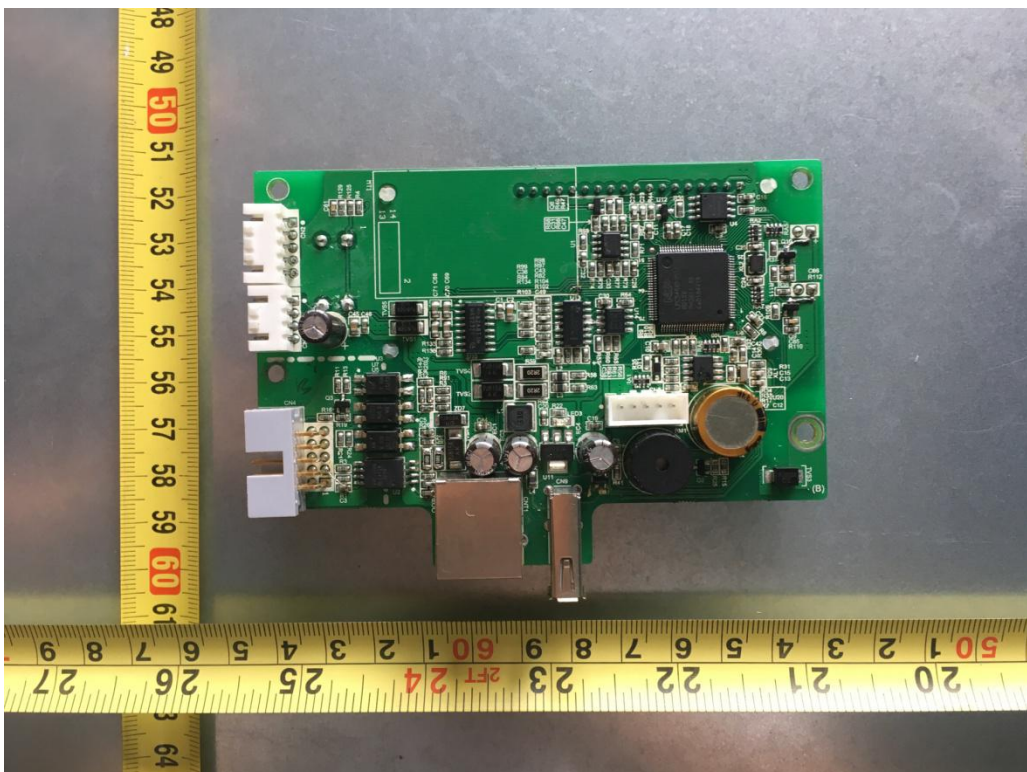


Figure 6. Back View of Display board

# Attachment 2 Photo documentation



Product: Solar Grid-tied Inverter

Type: SOFAR 3300TL-G3

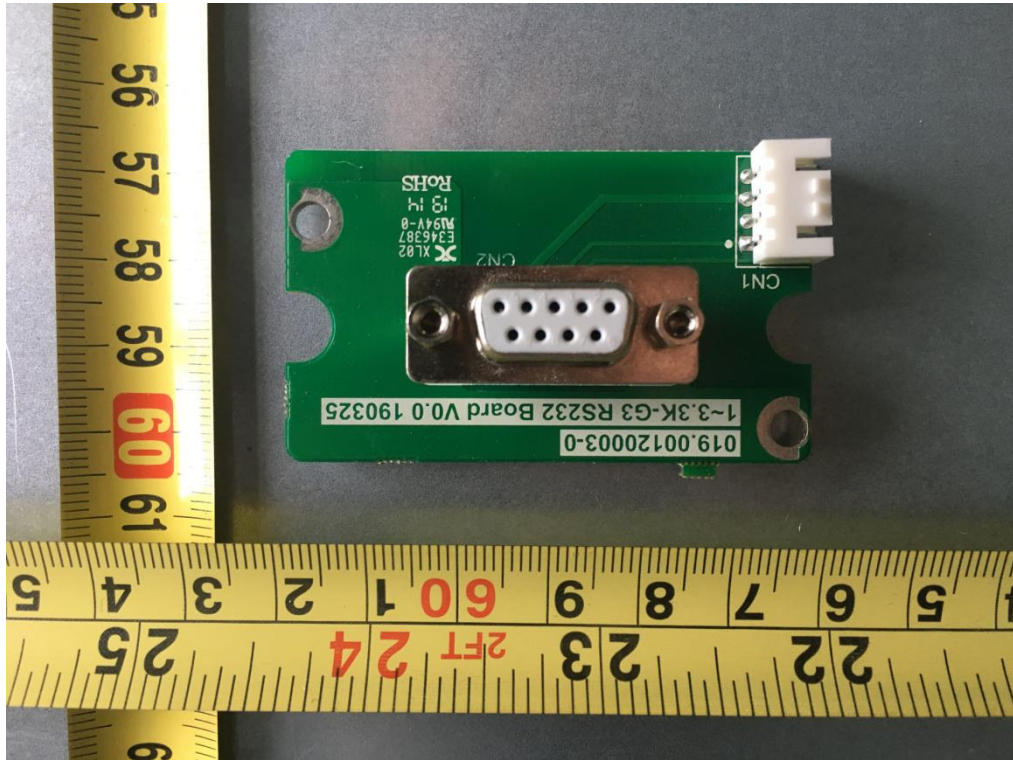


Figure 7. Front View of RS232 board

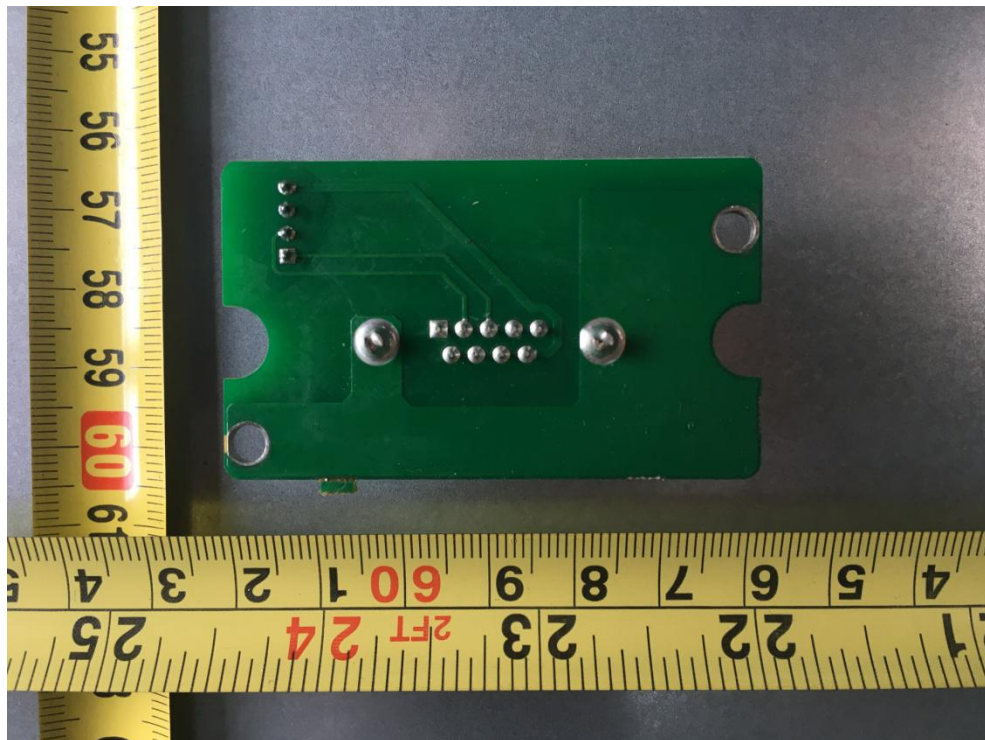


Figure 8. Back View of RS232 board

## Attachment 2 Photo documentation



Product: Solar Grid-tied Inverter

Type: SOFAR 3300TL-G3

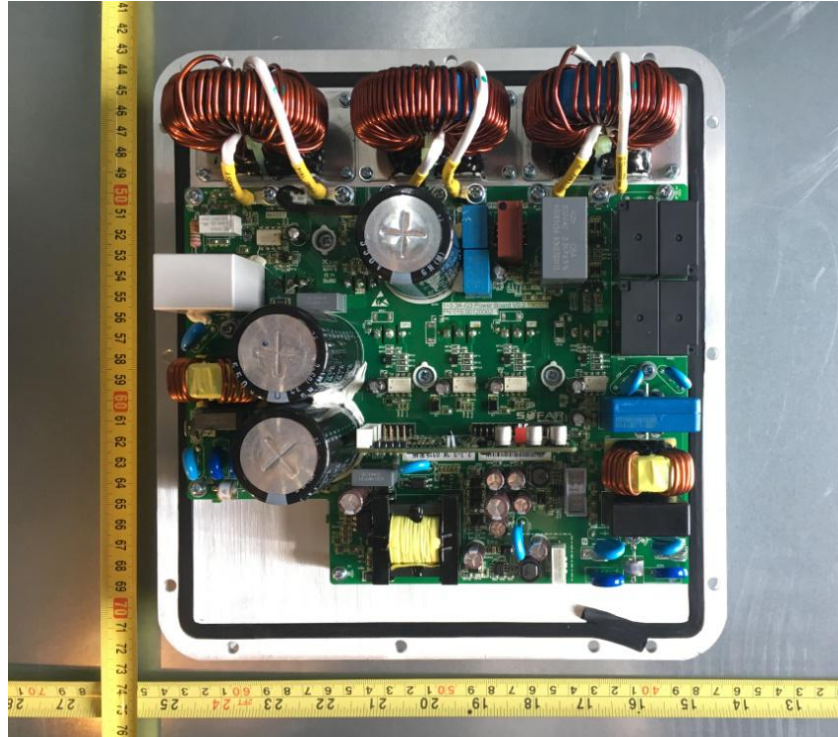


Figure 9. view of internal structure



Figure 10. Internal Earthing Terminal

# Attachment 2 Photo documentation



Product: Solar Grid-tied Inverter

Type: SOFAR 3300TL-G3



Figure 11. Connection Interface