



**BUREAU  
VERITAS**

# TEST REPORT

## UTE C15-712-1

Photovoltaic installations connected to the  
public distribution network

Report reference number ..... : PVFR170607N055

Date of issue ..... : 2017-07-11

Total number of pages ..... : 69

Testing laboratory name ..... : **Bureau Veritas Shenzhen Co.,  
Ltd. Dongguan Branch**

Address ..... : No. 34, Chenwulu Section,  
Guantai Rd., Houjie Town,  
Dongguan City, Guangdong  
523942, China



Applicant's name ..... : **Shenzhen SOFAR SOLAR Co., Ltd.**

Address ..... : 5/F, Building 4, Antongda Industrial Park, No.1 Liuxian Avenue, Xin'an  
Street, Bao'an District, Shenzhen City, Guangdong Province, P.R.  
China.

### Test specification

Standard ..... : UTE C15-712-1:2010-07, UTE C 15-712-1Rec0:2010-09 ,  
UTE C 15-712-1Rec1:2012-02, UTE C15-712-1:2013-07

DIN V VDE V 0126-1-1/A1 VFR2014

(Protections des installations de production raccordées Identification  
au réseau public de distribution, ERDF-NOI-RES\_13E, Version 6,  
11/07/2016)

With deviations for French Islands according protection de Découplage  
pour le Raccordement d'une production décentralisée en HTA et en BT  
dans les zones non interconnectées, référentiel technique – SEI REF  
04, V6

With deviations for French Islands according contrat de raccordement,  
d'accès et d'exploitation (CRAE) pour une installation de production  
photovoltaïque raccordée au réseau public d'électricité

Certificate ..... : **Certificate of compliance**

Test report form number. .... : UTE C15-712-1

Master TRF ..... : Bureau Veritas Consumer Products Services Germany GmbH


Test item description ..... : **AC-coupled Storage Converter**

Trademark ..... :



Model / Type ..... : ME 3000SP











<b>Ratings</b> ..... :	See below
Battery input DC voltage range [V] [Discharge]..... :	42-58
Battery input DC current [A] [Discharge]..... :	Max. 60
Output AC voltage [V]..... :	230, 50Hz
Output AC current [A]..... :	Max. 13
Output power [VA]..... :	3000

<b>Testing Location</b> .....	<b>Bureau Veritas Shenzhen Co., Ltd. Dongguan Branch</b>
Address.....	No. 34, Chenwulu Section, Guantai Rd., Houjie Town, Dongguan City, Guangdong 523942, China
Tested by (name and signature).....	James Huang 
Approved by (name and signature).....	Ted Wu 
<b>Manufacturer's name</b> .....	<b>Shenzhen SOFAR SOLAR Co., Ltd.</b>
Factory address .....	5/F, Building 4, Antongda Industrial Park, No.1 Liuxian Avenue, Xin'an Street, Bao'an District, Shenzhen City, Guangdong Province, P.R. China.

<b>Document History</b>			
<b>Date</b>	<b>Internal reference</b>	<b>Modification / Change / Status</b>	<b>Revision</b>
2017-07-11	James Huang	Initial report was written	--
Supplementary information:			

<b>Test items particulars</b>	
Equipment mobility .....	: Permanent connection
Operating condition .....	: Continuous
Class of equipment .....	: Class I
Protection against ingress of water ..	: IP65 according to EN 60529
Mass of equipment [kg] .....	: 16
<b>Test case verdicts</b>	
Test case does not apply to the test object.....	: N/A
Test item does meet the requirement.....	: P(ass)
Test item does not meet the requirement.....	: F(ail)
<b>Testing</b>	
Date of receipt of test item .....	: 2017-06-07
Date(s) of performance of test .....	: 2017-06-07 to 2017-06-29
<b>General remarks:</b>	
<p>The test result presented in this report relate only to the object(s) tested.          This report must not be reproduced in part or in full without the written approval of the issuing testing laboratory.</p> <p>"(see Annex #)" refers to additional information appended to the report.          "(see appended table)" refers to a table appended to the report.</p> <p>Throughout this report a comma is used as the decimal separator.</p>	
<b>This Test Report consists of the following documents:</b>	
<ol style="list-style-type: none"> <li>1. Test Results</li> <li>2. Annex No. 1 – DIN V VDE V 0126-1-1:2006-02/A1:2012-02 Test Report</li> <li>3. Annex No. 2 – Pictures of the unit</li> <li>4. Annex No. 3 – Test equipment list</li> </ol>	

Copy of marking plate:

 AC-coupled Storage Converter	
<b>Model No.</b>	<b>ME 3000SP</b>
Battery Type	Lead-acid, Lithium-ion
Battery Voltage Range	42-58Vdc
Max. Charging Current	60A
Max. Discharging Current	60A
Max. Charging & Discharging Power	3000VA
Nominal Grid Voltage	230Vac
Nominal Output Voltage	230Vac
Max. Output Current	13A
Nominal Grid Frequency	50/60Hz
Power factor	1 (adjustable +/- 0.8)
Ingress protection	IP65
Operating Temperature Range	-25+60°C
Protective Class	Class I
Manufacturer: Shenzhen SOFARSOLAR Co., Ltd.  VDE0126-1-1, VDE-AR-N4105, G83/2, EN50438, C10/11, RD1699, UTE C15-712-1, AS4777	
       	

Required markings on the inverter



**Attention**  
 Présence de deux sources  
 de tension  
 -Réseau de distribution  
 -Panneaux photovoltaïques




**Isoler les deux sources  
 avant toute  
 intervention**

**General product information:**


The AC-coupled Storage Converter is a single-phase type.

The input and output are protected by Varistors to Earth. The unit is providing EMC filtering at the output toward mains. The unit does not provide galvanic separation from input to output (transformer). The output is switched off redundant by the high power switching bridge and a two relays. This assures that the opening of the output circuit will also operate in case of one error.

**Description of the electrical circuit: (Figure 1 and 2):**

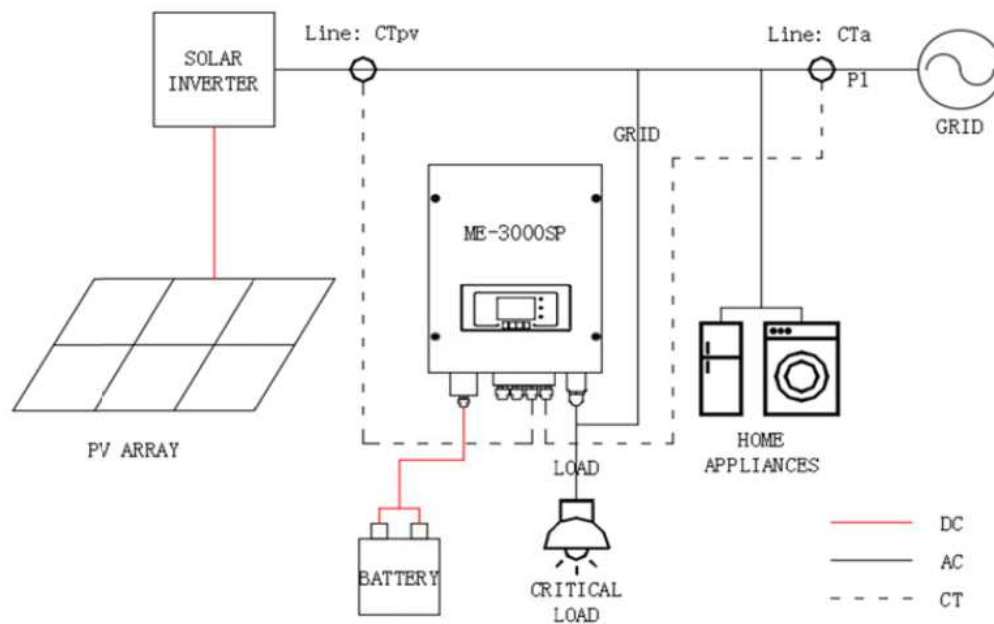

**Figure 1 –Energy storage add-on to existing renewable system overview**

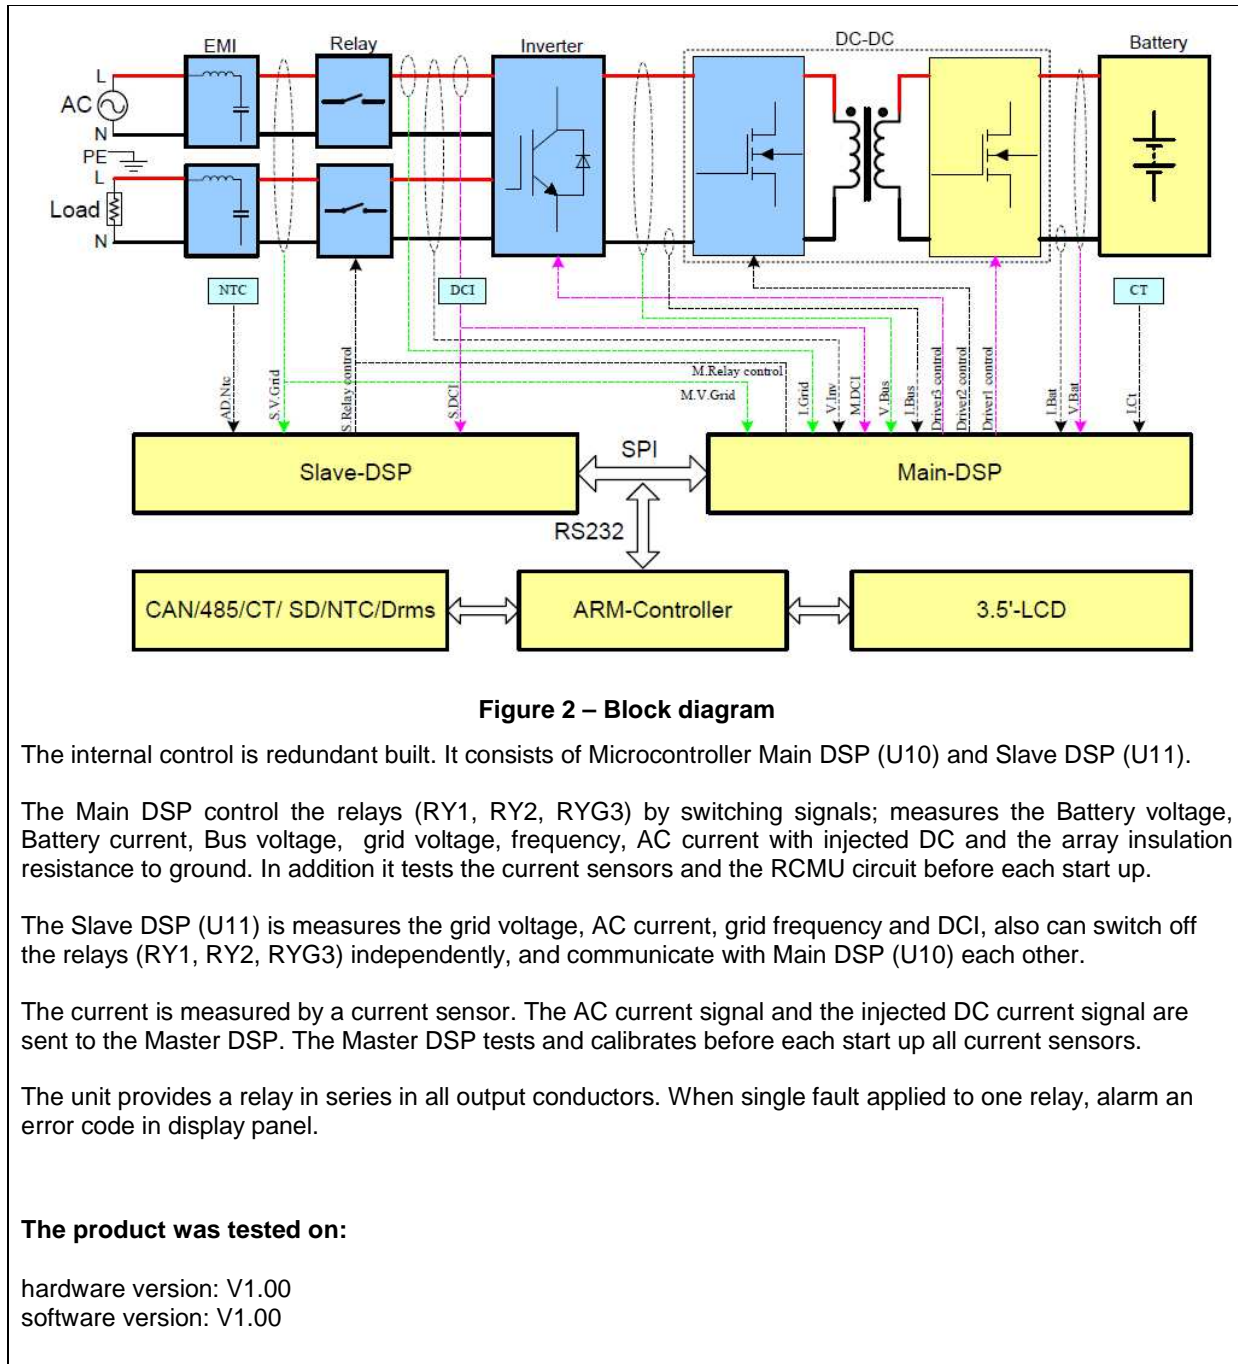

**Figure 2 – Block diagram**

The internal control is redundant built. It consists of Microcontroller Main DSP (U10) and Slave DSP (U11).

The Main DSP control the relays (RY1, RY2, RYG3) by switching signals; measures the Battery voltage, Battery current, Bus voltage, grid voltage, frequency, AC current with injected DC and the array insulation resistance to ground. In addition it tests the current sensors and the RCMU circuit before each start up.

The Slave DSP (U11) is measures the grid voltage, AC current, grid frequency and DCI, also can switch off the relays (RY1, RY2, RYG3) independently, and communicate with Main DSP (U10) each other.

The current is measured by a current sensor. The AC current signal and the injected DC current signal are sent to the Master DSP. The Master DSP tests and calibrates before each start up all current sensors.

The unit provides a relay in series in all output conductors. When single fault applied to one relay, alarm an error code in display panel.

**The product was tested on:**

hardware version: V1.00

software version: V1.00

Summary of testing:

The EUT was tested to the standard UTE C15-712-1:2010-07, UTE C 15-712-1Rec0:2010-09, UTE C 15-712-1Rec1:2012-02, UTE C15-712-1:2013-07.

1. The EUT ME 3000SP was tested on a 16 A (IEC) branch circuit.  
The safety of the unit relies on the branch circuit of building installation. If used on a branch circuit greater than this, additional testing may be necessary. The unit is approved for TN and TT mains connections.
2. The EUT provides wiring terminals within the enclosure for the DC input and AC output.
3. The enclosure fulfils the requirements of an electrical, mechanical and fire enclosure.
4. Input wiring for DC connection is rated 600 VAC / 750 VDC. This rating is considered acceptable, as the wiring fulfils the requirements for solid insulation (rated insulation voltage: 2500 V) – see list of critical components in IEC 62109-1 report “161008062GZU-002” issued by Intertek.
5. The EUT does not provide integrated combiner box, the accessibility and requirements of this sub-clause are to be evaluated in the final system.

The EUT complies with the requirements of IEC 62109-1:2010 and IEC 62109-2:2011, see IEC 62109-1 report “161008062GZU-002” and IEC 62109-2:2011 report “161008062GZU-003” issued by Intertek.

The following deviations for France according DIN V VDE V 0126-1-1/A1 VFR2014 has been applied according Protections des installations de production raccordées Identification au réseau public de distribution, ERDF-NOI-RES\_13E, Version 6, 11/07/2016.

Parameter	Max. clearance time	Trip setting
Over voltage	200ms	264,5V
Under voltage	200ms	184,0V
Over frequency	200ms	50,60Hz
Under frequency	200ms	47,50Hz
Reconnection time	>=30s	>=30s

The following deviations for French Islands to UTE C15-712-1 and DIN V VDE V 0126-1-1 (VDE V 0126-1-1):2006-02 have been applied according to protection de Découplage pour le Raccordement d'une production décentralisée en HTA et en BT dans les zones non interconnectées, référentiel technique – SEI REF 04, V6:

Parameter	Max. clearance time	Trip setting
Over voltage	200ms	255,3V
Under voltage	200ms	195,5V
Over frequency	200ms	52,0Hz
Under frequency	200ms	46,0Hz
Reconnection time	>=30s	>=30s

The following deviations for French Islands to UTE C15-712-1 and DIN V VDE V 0126-1-1 (VDE V 0126-1-1):2006-02 have been applied according to Contrat de raccordement, d'accès et d'exploitation (CRAE) pour une installation de production photovoltaïque raccordée au Réseau Public d'électricité:

Parameter	Max. clearance time	Trip setting
Over voltage	200ms	264,5V
Under voltage	200ms	195,5V
Over frequency	200ms	62,5Hz
Under frequency	200ms	55,0Hz
Reconnection time	>=30s	>=30s



<b>UTE C15-712-1</b>			
<b>Clause/§</b>	<b>Requirement</b>	<b>Remark</b>	<b>Verdict</b>
<b>1</b>	<p><b>Introduction</b></p> <p>The use of photovoltaic generators is growing for a variety of reasons, such as the generation of electricity in places that are difficult to access by public distribution networks or the development of renewable energy with production fed into the public network.</p> <p>The development of such generators requires the specification of implementation rules, which are the subject of this guide.</p> <p>The application of these rules does not remove the need to observe administrative regulations by which certain installations are bound.</p>		
<b>2</b>	<p><b>Applicability</b></p> <p>This guide deals with low-voltage photovoltaic installations connected to the low-voltage or high-voltage public distribution network.</p> <p>The a.c. modules (PV module and associated inverter) are not included in this guide. The installation of these is subject to the regulations set down in NF C 15-100.</p> <p>The only issue covered in this guide is operation under voltage on the public distribution network.</p>		
<b>3</b>	<p><b>Normative references</b></p> <p>NF EN 50380 (C 57-201)</p> <p>NF EN 50521 (CF57-339)</p> <p>NF EN 60269-1 (C 60-200-1)</p> <p>NF EN 60904-3 (C 57-323)</p> <p>NF EN 60947-1 (C 63-001)</p> <p>NF EN 60947-2 (C 63-120)</p> <p>NF EN 60947-3 (C 63-130)</p> <p>NF EN 61215 (C 57-105)</p> <p>NF EN 61439</p> <p>NF EN 61557-8 (C 42-198-8)</p> <p>NF EN 61643-11 (C 61-740)</p> <p>NF EN 61646 (C 57-109)</p> <p>NF EN 61730-1 (C 57-111-1)</p> <p>NF EN 61730-2 (C 57-111-2)</p> <p>NF EN 62262 (C 20-015)</p> <p>NF EN 62305-1 (C 17-100-1)</p> <p>NF EN 62305-2 (C 17-100-2)</p> <p>NF EN 62305-3 (C 17-100-3)</p> <p>NF C 14-100</p> <p>NF C 15-100</p> <p>NF C 17-102</p> <p>UTE C 15-105</p>		

UTE C15-712-1			
Clause/§	Requirement	Remark	Verdict
	UTE C 15-400		
	UTE C 15-520		
	UTE C 32-502		
	UTE C 17-100-2		
	UTE C 61-740-51		
	UTE C 61-740-52		
	UTE C 17-108		
	DIN VDE 0126-1-1		
	DIN EN61000-6-3		
4	In addition to the definitions set out in NF C 15-100, the following definitions apply to this guide:	Noticed.	P
5	Description of PV installations	No PV string.	N/A
6.	<b>Earthing of the installation</b>		P
6.1	<b>Diagrams showing bonding of alternating current part with earth</b> The earthing system has been produced in accordance with the requirements of NF C 15-100.	Must be taken under consideration for the installation.	N/A
6.2	<b>Earthing of one polarity in the d.c. part</b> In a PV installation, the protection devices against indirect contact are independent of the principle of the earthing systems. The direct current part is created in accordance with the rules for class II or equivalent isolation.	No PV string.	N/A
6.3	<b>Earthing of conductive masses and elements</b>		P
6.3.1	<b>Direct current part</b> To minimise the effects of induced overvoltages, the metal structures of the modules and the metal support structures (including the metal cable runs) must be connected to equipotential bonding, which in turn is connected to the earth.	Must be taken under consideration for the installation.	N/A
6.3.2	<b>Alternating current part</b> All chassis on the a.c. side must be connected to the earth via a protective conductor that meets the requirements of paragraph 411.3.1.2 and section 5-54 of NF C 15-100. If a transformer is installed outside the inverter (low voltage/low voltage or high voltage/low voltage transformer), equipotential bonding is required between these items of equipment.	Must be taken under consideration for the installation.	N/A
6.3.3	<b>Inverter</b> The inverter body must be connected to the equipotential bonding via a conductor with a minimum cross-section of 6mm <sup>2</sup> Cu or equivalent and to the protective conductor of the a.c. part.	A minimum cross-section of the protective earthing wire of 6mm <sup>2</sup> is required in the manual.	P
7.	<b>Protection against electric shock</b>		P

UTE C15-712-1			
Clause/§	Requirement	Remark	Verdict
7.1	<p><b>General points</b></p> <p>The PV equipment of the direct current part must be treated as being under voltage, even if it is disconnected from the alternating current part.</p>	No PV string.	<b>N/A</b>
7.2	<p>Protective measure SELV or PELV by the DC part</p> <p>The requirements of SELV or PELV are described in Article 414 of the NF C 15-100 and are detailed below:</p> <ul style="list-style-type: none"> <li>- The ac part of the plant is separated by a safety transformer according to the NF EN 61558-2-6 or safety converter according to the NF EN 61046, in accordance with 414.3 of the NF C 15-100. The safety transformer or safety converter can be integrated in the inverter or close to it if the link between the two devices is done with the Class II equipment or equivalent insulation.</li> <li>- PELV, a polarity of the d.c. part is grounded.</li> <li>- SELV is prohibited if the party d.c. includes a set of functional ground polarity</li> </ul> <p>In cases where the protective measure by SELV or PELV is prohibited, the general protection measures apply (double or reinforced insulation).</p>	<p>SELV is classified for communication ports.</p> <p>PELV is classified for battery input terminals.</p> <p>The communication ports to AC circuit complied with double isolation, the DC circuit to AC circuit complied with basic isolation.</p>	<b>P</b>
7.3	<p><b>Protection against direct contact</b></p>		<b>P</b>
7.3.1	<p><b>General</b></p> <p>All connection points required for the realization of a PV string whose Uocmax voltage is above 60 V, should be insured by connectors including at its ends.</p> <p>These connectors must conform to the EN 50521 standard.</p>	No PV string.	<b>N/A</b>
7.3.2	<p><b>Case of the installation in LV</b></p> <p>Electrical equipment must be fitted with a form of protection either by insulation of the live parts or through a casing.</p> <p>The cabinets or boxes containing accessible live parts must be locked either with a key or with a tool, unless they are located in a place to which only authorised or qualified persons have access.</p> <p>If the boxes or cabinets are not located in a place to which only authorised or qualified persons have access, protection against direct access must be ensured when an access door is opened by installing equipment that, by the nature of its design or installation, has a minimum degree of protection of IP2X or IPXXB.</p>	The unit is rated IP65, see test report 161008062GZU-001 issued by Intertek.	<b>P</b>

<b>UTE C15-712-1</b>			
<b>Clause/§</b>	<b>Requirement</b>	<b>Remark</b>	<b>Verdict</b>
7.3.3	<p><b>If the installation is SELV (extra-low voltage) and PELV (protective extra-low voltage)</b>            If the nominal voltage of the safety extra-low voltage circuit is less than or equal to 25 V rms a.c. or 60 V d.c. without ripple, protection against direct contact through insulation of the live parts or a casing is not necessary.            If the nominal voltage of the protective extra-low voltage circuit is less than or equal to 12 V rms a.c. or 30 V d.c. without ripple, protection against direct contact through insulation of the live parts or a casing is not necessary.</p>	<p>SELV is classified for communication ports.            PELV is classified for battery input terminals.            The communication ports to AC circuit complied with double isolation, the DC circuit to AC circuit complied with basic isolation.</p>	<b>P</b>
7.4	<b>Protection against indirect contact</b>		<b>P</b>
7.4.1	<p><b>General</b>            The regulations for protection against indirect contact are set out in section 4-41 of NF C 15-100.            The circuits covered by 411.3.3 of standard NF C 15-100 and, in particular, circuits in residential buildings must be protected with a differential device with a sensitivity of 30 mA or less.            The aim of this section is to describe the different ways of protecting people against indirect contact in a photovoltaic installation according to the measures implemented on the d.c. side and the presence or otherwise of galvanic isolation via a transformer between the d.c. and a.c. parts.</p>	<p>No PV string.            Must be taken under consideration for the installation.</p>	<b>N/A</b>
7.4.2	<b>Direct current part</b>		<b>N/A</b>
7.4.2.1	<p><b>General</b>            For the direct current part (PV modules, junction boxes, chain cables, group cables, marshalling boxes or cabinets, etc.), protection against indirect contact must be ensured through at least one of the following measures:</p> <ul style="list-style-type: none"> <li>• Protection through safety extra-low voltage or protective extra-low voltage;</li> <li>• Protection through double or reinforced insulation.</li> </ul> <p>In the case of the installation of cabinets in a building or electrical service site where access is restricted to qualified personnel, this cabinet can be a class 1 cabinet.</p>		<b>N/A</b>
7.4.2.2	<b>Protection with double or reinforced insulation</b>		<b>N/A</b>

<b>UTE C15-712-1</b>			
<b>Clause/§</b>	<b>Requirement</b>	<b>Remark</b>	<b>Verdict</b>
7.4.3	<p><b>Alternating current part</b></p> <p>Protection against indirect contact is ensured through double or reinforced insulation or by an automatic cut-out of the supply, according to one of the following measures:</p> <ul style="list-style-type: none"> <li>• In a TT system: cut-out on the first fault;</li> <li>• In a TN system: cut-out on the first fault;</li> <li>• In an IT system: cut-out on the second fault.</li> </ul>		<b>N/A</b>
<b>8</b>	<b>Overcurrent protection</b>		<b>N/A</b>
8.1	<b>Direct current part</b>		<b>N/A</b>
8.1.1	<p><b>General points</b></p> <p>See figure 7 of this standard</p>	No PV string. Must be taken under consideration for the installation.	<b>N/A</b>
8.1.2	<p><b>Protection of PV modules</b></p> <p>In an installation with several PV module chains in parallel, the modules must be protected against the effect of reverse currents that may be generated in the chains in the event of a fault.</p>	No PV string. Must be taken under consideration for the installation.	<b>N/A</b>
8.1.3	<p><b>Protection of PV chain cables</b></p> <p>The sizing of the PV chain cables takes into account the choice of protection device for the PV modules adopted in 8.1.2.</p>	No PV string. Must be taken under consideration for the installation.	<b>N/A</b>
8.1.4	<p><b>Protection of PV group cables</b></p> <p>In an installation with several PV groups in parallel, the cables for the groups must be protected against the effect of reverse currents caused by a short circuit in a group.</p>	No PV string. Must be taken under consideration for the installation.	<b>N/A</b>
8.1.5	<p><b>Protection of main PV cable</b></p> <p>The main cable of a PV generator must be dimensioned with a permissible current <math>I_z</math> greater than or equal to <math>1.25 I_{scSTC\_gen}</math>.</p>	No PV string. Must be taken under consideration for the installation.	<b>N/A</b>
8.1.6	<p><b>Characteristics of overcurrent protection devices</b></p> <p>The overcurrent protection devices must be either fuses compliant with standard NF EN 60269-1 or circuit-breakers compliant with standard NF EN 60947-2. These devices must be implemented for both polarities, regardless of the configuration of the installation.</p>	No PV string. Must be taken under consideration for the installation.	<b>N/A</b>
8.2	<b>Alternating current part</b>		<b>N/A</b>

<b>UTE C15-712-1</b>			
<b>Clause/§</b>	<b>Requirement</b>	<b>Remark</b>	<b>Verdict</b>
8.2.1	<p><b>General points</b></p> <p>In the case of an installation connected to the network via a branch line with limited power, the minimum cross-section of the conductors connected to the terminals downstream of the general isolating and protection device is 10 mm<sup>2</sup> Cu.</p>	Must be taken under consideration for the installation.	<b>N/A</b>
8.2.2	<p><b>Overload protection</b></p> <p>Alternating current circuits are protected against surges in accordance with the requirements of article 433 of standard NF C 15-100.</p>	Must be taken under consideration for the installation.	<b>N/A</b>
8.2.3	<p><b>Short-circuit protection</b></p> <p>In the case of a short circuit in an inverter or its line, the inverter is regarded as the load and the public network as the source.</p>	Must be taken under consideration for the installation.	<b>N/A</b>
9.	<p><b>Interface protection</b></p> <p>This protection device is designed to disconnect generators in the event of:</p> <ul style="list-style-type: none"> <li>• a fault on the public distribution network;</li> <li>• a failure in the supply from the public distribution network;</li> <li>• fluctuations in the voltage or frequency greater than those specified by the distributor.</li> </ul>	The unit provides a integral disconnection facility according to VDE 0126-1-1 an it is rated below 250kW	<b>P</b>
10	<p><b>Prevention of degradation of photovoltaic installations</b></p> <p>In order to prevent the degradation of PV installations due to specific external influences and the presence of direct current, and despite the implementation of measures such as the installation of double insulation and monoconductor cables, additional measures must be implemented for the direct current part.</p>	Not connect to PV array.	<b>N/A</b>
11	<b>Voltage drop</b>		
11.1	<p><b>General points</b></p> <p>The objective of technical and commercial optimisations is to minimise voltage drops.</p>	Must be taken under consideration for the installation.	<b>N/A</b>
11.2	<p><b>Direct current installation</b></p> <p>The authorised maximum drop in voltage in the direct current part of the installation is between 3% and ImppSTC (STC: standard test conditions).</p>	Must be taken under consideration for the installation.	<b>N/A</b>

<b>UTE C15-712-1</b>			
<b>Clause/§</b>	<b>Requirement</b>	<b>Remark</b>	<b>Verdict</b>
11.3	<p><b>Alternating current installation</b></p> <p>For PV installations connected directly to the LV public distribution network, the maximum authorised drop in voltage between the a.c. terminals of the inverter and the point of delivery (NF C 14-100) is 3% at the nominal power of the inverter(s). It is recommended to limit this drop in voltage to 1% in order to be able to limit energy losses on the one hand and momentary disconnection of the inverter on the other, maintaining a margin between the average operating voltage of the inverter and the setting of its protection at maximum voltage.</p>	Must be taken under consideration for the installation.	<b>N/A</b>
<b>12.</b>	<b>Isolation, control and disconnection</b>		<b>N/A</b>
12.1	<p><b>Isolation / Disconnection</b></p> <p>To facilitate maintenance of the PV inverters, disconnection mechanisms must be installed close to the inverter, on both direct current and alternating current sides.</p> <p>NOTE For high power inverters whose maintainability can be ensured by replacement of internal components, the isolating device can be integrated in the same envelope.</p> <p>All disconnectors must be omnipolar.</p> <p>The disconnector installed on the direct current side does not have to be with simultaneous opening of each polarity.</p>	Must be taken under consideration for the installation.	<b>N/A</b>
12.2	<p><b>Control</b></p> <p>To allow maintenance work on junction boxes fitted with protection devices, a circuit-breaker must be installed inside or immediately downstream of these protection devices.</p>	Must be taken under consideration for the installation.	<b>N/A</b>
12.3	<b>Emergency circuit-breakers</b>		<b>N/A</b>
12.3.1	<p><b>General points</b></p> <p>In accordance with the regulations set down in articles 463 and 536.3 of standard NF C 15-100, emergency circuit-breakers must be fitted on both a.c. and d.c. sides in order to cut off the electricity supply in the event of an unexpected hazard.</p> <p>All emergency circuit-breakers must effect an omnipolar and simultaneous disconnection. These devices are either switches or breakers or contactors. The semiconductor devices do not comply with this requirement. The controls of emergency circuit-breakers on both d.c. and a.c. sides must be easily recognisable and quickly accessible.</p> <p>Emergency circuit-breakers must not be built into the inverter.</p> <p>NOTE For high-power inverters, the switchgear device can be integrated in the same envelope.</p>	Must be taken under consideration for the installation.	<b>N/A</b>

<b>UTE C15-712-1</b>			
<b>Clause/§</b>	<b>Requirement</b>	<b>Remark</b>	<b>Verdict</b>
12.3.2	<p><b>Emergency cutoff of the DC part</b></p> <p>A cut-off device must be provided upstream from the inverter and its control shall be located close to this one.</p> <p>The emergency disconnection can be ensured by manual control of the circuit-breaker or via a remote control action.</p> <p>It must be possible to cut each supply to the inverter. In the case of inverters with multiple inputs, it is permissible to ensure an emergency disconnection by means of separately controlled devices.</p>	Must be taken under consideration for the installation.	<b>N/A</b>
12.3.3	<b>Alternating current part</b>		<b>N/A</b>
12.3.4	<p><b>Measures specific to residential buildings</b></p> <p>In conformity with the regulations set down in article 771.463 of standard NF C 15-100, the emergency circuit-breakers must be tripped by a direct manual action.</p> <p>If the route between the inverter and the network passes through the residential part, the emergency circuit-breaker of the PV installation must be installed in the residential service duct of the building, if there is one, in accordance with articles 771.463 and 771.558 of standard NF C 15-100.</p>	Must be taken under consideration for the installation.	<b>N/A</b>
12.4	<b>Cut-out for intervention by emergency services</b>	Must be taken under consideration for the installation.	<b>N/A</b>



UTE C15-712-1			
Clause/§	Requirement	Remark	Verdict
12.4.1	<p><b>General</b></p> <p>If a cut-out is required to allow the intervention of the emergency services, this must be triggered by one of the following events:</p> <ul style="list-style-type: none"> <li>• Cut-out of all sources of electrical energy <ul style="list-style-type: none"> <li>○ PV generator</li> <li>○ Public distribution network</li> </ul> </li> <li>• Switching devices must meet the following principles <ul style="list-style-type: none"> <li>○ these devices are either switches or breakers or contactors; the semiconductor devices do not comply with this requirement;</li> <li>○ each device must be omnipolar and simultaneous interruption;</li> </ul> </li> <li>• the failure of the PV generator circuit is done as close to the photovoltaic modules and in any case upstream of accessible rooms and passages to the occupants;</li> <li>• orders for these switching devices for intervention of emergency services are grouped. In the case of facilities on an existing building, it is assumed to have non-grouped commands.</li> </ul> <p>The switching devices can be:</p> <ul style="list-style-type: none"> <li>• Mechanical direct action;</li> <li>• Remote-controlled (electric or pneumatic)</li> </ul> <p>The remote control may be provided by one of three principles:</p> <ul style="list-style-type: none"> <li>• Trigger voltage loss;</li> <li>• trigger current or powered engine emissions, through CR1 type cable, by AES (Safety Electric Power) implemented under subsection 562.8 of the NF C 15-100;</li> <li>• pneumatic actuator with a compressed gas energy source and copper pipes or steel tube (according to standard NF EN 12101).</li> </ul> <p>Signaling the action disconnection should be done by voltage measurements indications or voltage free loop devices by type O / F. In the case of using the DC voltage measurement, it should then be taken between the separating apparatus and the area to be secured. The cables used for signaling are CR1 type.</p> <p>This signal is provided by the extinction of a white LED that indicates the actual disconnection.</p>	<p>Must be taken under consideration for the installation.</p>	<p><b>N/A</b></p>

<b>UTE C15-712-1</b>			
<b>Clause/§</b>	<b>Requirement</b>	<b>Remark</b>	<b>Verdict</b>
<b>12.4.1</b>	<p><b>Additional provisions</b> If it is required that the voltage of the PV generator is below 60 Vdc, the circuit upstream of the required disconnection is general in provisions of 12.4.1, this is achieved by:</p> <ul style="list-style-type: none"> <li>• an electromechanical load breaking or unloaded in series in each string by PV Uocmax section whose voltage is lower or equal to 60 V, or</li> <li>• electromechanical short-circuit or electronic systems by Uocmax section whose voltage is lower or equal to 60 V, or</li> <li>• electromechanical or electronic shorting by Modular Systems The operational safety of these principles requires: <ul style="list-style-type: none"> <li>• a positive safety control;</li> </ul> </li> <li>• in the case of an electromechanical load cut off, his order should be performed after the charge downstream switching device. The implementation of this equipment must be comply with the rules of double insulation (or reinforced insulation) imposed in this part of the system and for a voltage corresponding to the chain tension Uocmax.</li> </ul>	Must be taken under consideration for the installation.	<b>N/A</b>
<b>13</b>	<b>Protection from surges emanating from the atmosphere or caused by operations</b>		<b>N/A</b>
13.1	<p><b>General points</b> The information contained in this chapter refers to overvoltage protection for photovoltaic installations connected to the network and complements standard NF C 15-100 and guide UTE C 61-740-52.</p>	Must be taken under consideration for the installation.	<b>N/A</b>
13.1.1	<b>Types of protection</b>		<b>N/A</b>
13.1.1.1	<p><b>Protection through equipotential bonding</b> As described in section 6.3, an equipotential bonding conductor must connect all the metal structures of the modules and the metal structures of the supports of the PV installation (including the metal cable runs) whether or not lightning conductors are present. This conductor must be connected to the earth.</p>	Must be taken under consideration for the installation.	<b>N/A</b>
13.1.1.2	<p><b>Protection by lightning arresters</b> The installation conditions are described in 13.2.</p>	Must be taken under consideration for the installation.	<b>N/A</b>
13.2	<b>Installation conditions for lightning arresters</b>		<b>N/A</b>

UTE C15-712-1			
Clause/§	Requirement	Remark	Verdict
13.2.1	<p><b>Installation conditions for lightning arresterson a.c. side</b></p> <p>Based on guide UTE C 61-740-52, protection by a lightning arrester is obligatory if there is a lightning conductor or if the lightning density (Ng) is greater than 2.5.</p>	Must be taken under consideration for the installation.	<b>N/A</b>
13.2.2	<p><b>Installation conditions for lightning arresters on d.c. side</b></p>		<b>N/A</b>
13.2.2.1	<p><b>Installation without lightning conductor</b></p> <p>The length L is the accumulated distance between the inverter(s) and the furthest points of the photovoltaic modules comprising the chain, as a sum of the lengths of the routes in accordance with the principles shown in Figure 7.</p>	Must be taken under consideration for the installation.	<b>N/A</b>
13.2.2.2	<p><b>Installation with lightning conductor</b></p> <p>The installation of type 2 lightning conductor(s) is obligatory on the d.c. side.</p>	Must be taken under consideration for the installation.	<b>N/A</b>
13.3	<p><b>Overvoltage protection for installations without lightning conductor</b></p>	Must be taken under consideration for the installation.	<b>N/A</b>
13.3.1	<p><b>Choice and installation of lightning arresters on a.c. side</b></p> <p>If a lightning arrester is prescribed for the a.c. part of a PV installation connected to the public low-voltage distribution network, it is always installed in the panel nearest to the installation origin of the installation. If this lightning arrester is located more than 10 metres away from the inverter, a second lightning arrester must be installed near the latter.</p>	Must be taken under consideration for the installation.	<b>N/A</b>
13.3.2	<p><b>Choice and installation of lightning arresters on d.c. side</b></p> <p>If a lightning arrester is prescribed for the d.c. part of a PV installation, it is always installed in the panel nearest to the inverter. If one of the chains is located more than 10 metres away from the inverter, the installation of a second lightning arrester near the chains is recommended.</p>	Must be taken under consideration for the installation.	<b>N/A</b>
13.3.2.1	<p><b>Choice of <math>I_n</math></b></p> <p>The lightning arresters are type 2 with a minimum value for the nominal discharge current <math>I_n</math> of 5 kA. A higher nominal discharge current than the required value will prolong the service life of the lightning arrester.</p>	Must be taken under consideration for the installation.	<b>N/A</b>
13.3.2.2	<p><b>Choice of <math>I_{max}</math></b></p> <p>This parameter is used to coordinate the energy of the lightning arresters: please refer to information from the manufacturer.</p>	Must be taken under consideration for the installation.	<b>N/A</b>

UTE C15-712-1			
Clause/§	Requirement	Remark	Verdict
13.3.2.3	<p><b>Choice of <math>I_{imp}</math></b> The impulse current <math>I_{imp}</math> for Type 1 arresters is chosen according to the UTE C 61-740-52 guide or by default with a minimum value of 12.5 kA.</p>	Must be taken under consideration for the installation.	N/A
13.3.2.4	<p><b>Choice of <math>U_p</math></b> The value of <math>U_p</math> must be less than 80% of the surge withstand voltage of the equipment to be protected.</p>	Must be taken under consideration for the installation.	N/A
13.3.2.5	<p><b>Choice of <math>U_{CPV}</math></b> The value of the maximum permissible voltage from the lightning arrester UCPV must be selected according to the maximum open-circuit voltage of the PV generator corresponding to the voltage <math>U_{ocSTC}</math> specified by the manufacturers of the PV modules. The voltage UCPV must be greater than or equal to the maximum voltage <math>U_{ocMAX}</math> of the photovoltaic generator. Whatever the protection methods of the lightning arrester, it must also withstand the maximum voltage <math>U_{ocMAX}</math> between these live terminals (+ and - terminals) and the earth.</p>	Must be taken under consideration for the installation.	N/A
13.3.2.6	<p><b>Choice of <math>I_{SCPV}</math> and protection device associated with the lightning arrester</b> <math>I_{SCPV}</math> keeping abreast short of an arrester system The lightning arrester must be fitted with an external disconnection device, if specified by the manufacturer; this assembly must be sized to function regardless of the current produced by the PV modules. Note: The lightning arresters can come to the end of their service life for the following reasons:</p> <ul style="list-style-type: none"> <li>• Due to overheating caused by an excessive accumulation of lightning stresses that do not exceed the normal characteristics of the lightning arrester but lead to a gradual destruction of its internal components;</li> <li>• Short-circuiting caused by the normal characteristics of the lightning arrester being exceeded, leading to a drastic reduction in its impedance.</li> </ul> <p>The maximum value <math>I_{scPV}</math> of the current permitted by the lightning arrester and any disconnecter it may have must be selected according to the current <math>I_{scpv}</math> that may be delivered by the photovoltaic generator. The <math>I_{SCPV}</math> current must be greater than or equal to <math>I_{scmax}</math> of the PV generator. Lightning arresters for which fulfilment of this parameter is not stated must not be used.</p>	Must be taken under consideration for the installation.	N/A

UTE C15-712-1			
Clause/§	Requirement	Remark	Verdict
13.4	<p><b>Additional regulations for surge protection for installations with a lightning conductor</b></p> <p>The regulations are set out in guide UTE C 61-740-52.</p>	Must be taken under consideration for the installation.	N/A
<b>14.</b>	<b>Choice and installation of equipment</b>		<b>P</b>
14.1	<p><b>General points</b></p> <p>The rated operating voltage of all the equipment of the d.c. part must be equal to or greater than the voltage UOCMAX.</p> <p>In the case of buildings with multiple occupation (for tertiary or residential use) with photovoltaic production in communal parts, the lines coming from the PV modules must be routed round the outside of private areas to the junction boxes for the chain/group located in the communal areas or in the buildings or the electrical service site dedicated to this purpose.</p> <p>The equipment installed outside must have a minimum degree of protection of IP44. The degree of protection against mechanical impacts must be at least IK07 in compliance with standard NF EN 62262 (C 20-015).</p> <p>It must be possible to carry out work on the removable equipment, devices and connections in the utmost safety.</p> <p>If a transformer is installed, the inverters and any general low-voltage panel must be installed close to the transformer in the same room or in adjoining rooms.</p> <p>The location of equipment (junction box(es), inverter(s), cabinets with protection devices and meter cabinets etc.) must comply with article 513.1 of standard NF C 15-100. Special regulations for residential buildings are given in article 771. The equipment, including the ducts etc., must be arranged so that they can be operated, inspected and serviced easily and their connections can be accessed.</p>	The inverter is rated IP65 and IK07. For IK see test results below.	<b>P</b>
14.2	<b>Ducts etc.</b>		<b>N/A</b>
14.2.1	<p><b>Choice for the d.c. part</b></p> <p>The ducts are sized in accordance with the regulations in standard NF C 15-100 on the basis of cables with reticulated polyethylene insulation.</p>	Must be taken under consideration for the installation.	<b>N/A</b>
14.2.2	<p><b>Installation</b></p> <p>The connections and the cables must be installed in a manner that will prevent any deterioration due to external influences. See the requirements set out in guide UTE C 15-520.</p>	Must be taken under consideration for the installation.	<b>N/A</b>

<b>UTE C15-712-1</b>			
<b>Clause/§</b>	<b>Requirement</b>	<b>Remark</b>	<b>Verdict</b>
14.3	<p><b>PV modules</b></p> <p>The PV modules must comply with the standards in series NF EN 61730.</p>	Must be taken under consideration for the installation.	<b>N/A</b>
14.4	<p><b>Inverters</b></p> <p>The inverters must be comply with IEC 62109-1 and EN 62109-2.</p> <p>The level of the current for the inverter must be based on ImpPSTC.</p> <p>Direct current generated by inverters injected on the public distribution network must be less than 0.5% of its rated current.</p>	<p>Comply with IEC 62109-1 and IEC 62109-2.</p> <p>Details see IEC 62109-1 report "161008062GZU-002" and IEC 62109-2:2011 report "161008062GZU-003" issued by Intertek.</p> <p>The unit does provide galvanic separation (transformer) from input to output, DC injection is not evaluated.</p>	<b>P</b>
14.5	<p><b>Equipment</b></p> <p>All equipment installed in the d.c. part must be adapted for operation in direct current and be selected and installed in accordance with the manufacturer's instructions.</p> <p>Equipment installed in the d.c. part must be of the industrial type, in other words compliant with the NF EN 60947 series of standards.</p> <ul style="list-style-type: none"> <li>• The characteristics of switches, switch-disconnectors and fuse-combination units must conform to the operating category DC21B.</li> <li>• The characteristics of disconnectors must conform to the operating category DC20.</li> <li>• The characteristics of contactors must conform to the operating category DC1.</li> </ul>	Must be taken under consideration for the installation.	<b>N/A</b>

<b>UTE C15-712-1</b>			
<b>Clause/§</b>	<b>Requirement</b>	<b>Remark</b>	<b>Verdict</b>
14.6	<p><b>Equipment assemblies</b></p> <p>The direct current and alternating parts of the installation can be accommodated in the same panel if there is a physical separation of these two parts.</p> <p>For the d.c. part, it is imperative to protect all the connections or disconnection devices against accidental or unauthorised opening when live in accordance with 536.2.3 of standard NF C 15-100. To this end, a notice “Do not operate when live” must be placed inside the boxes or cabinets near these disconnection devices.</p> <p>Furthermore, in premises accessible to persons other than those with the requisite authorisation or qualification (BA4 or BA5):</p> <ul style="list-style-type: none"> <li>• The design or installation must be such that it is only possible to disassemble the connection devices with the aid of a tool;</li> <li>• Equipment that does not have an under load circuit-breaking feature must require the either the use of a key or tool or the direct operation of a device with an under load circuit-breaking feature.</li> </ul>	The DC input connectors can not be removed with out a aid of a tool. In addition there is a marking adjent the connectors with states “Do not operate when live”	<b>P</b>
14.7	<p><b>Connectors</b></p> <p>In the d.c. part, the connectors used must comply with the standard NF EN 50521. To guarantee the quality of the connection and limit the risks of an electric arc that could spark a fire, each pair of male and female connectors to be assembled must be of the same type and the same brand.</p>	No PV string.	<b>N/A</b>
14.8	<p><b>Lightning arresters</b></p>	Must be taken under consideration for the installation.	<b>N/A</b>
14.8.1	<p><b>Choice of lightning arresters</b></p> <p>The lightning arresters installed in the a.c. part of the PV installation must comply with standard NF EN 61643-11.</p> <p>The lightning arresters installed in the d.c. part of the PV installation must meet the requirements of guide UTE C 61-740-51.</p>	Must be taken under consideration for the installation.	<b>N/A</b>
14.8.2	<p><b>Installation of lightning arresters</b></p> <p>Alternating current and direct current lightning arresters are installed in accordance with the regulations set out in guide UTE C 61-740-52.</p>	Must be taken under consideration for the installation.	<b>N/A</b>
<b>15</b>	<p><b>Markings</b></p>		<b>P</b>

<b>UTE C15-712-1</b>			
<b>Clause/§</b>	<b>Requirement</b>	<b>Remark</b>	<b>Verdict</b>
15.1	<p><b>Identification of components</b></p> <p>The main components comprising the photovoltaic installations must be identified and marked with clearly visible labels fixed permanently in accordance with the installation plans and diagrams:</p>	The inverter provides permanent marking.	<b>P</b>
15.2	<p><b>Labelling</b></p> <p>For safety reasons and to alert the different people carrying out work in and around the building (staff tasked with maintenance work, inspectors, public distribution network operators, emergency services, etc.), it is imperative that the presence of a photovoltaic installation on a building is indicated.</p>		<b>P</b>
15.2.1	<b>Labelling on the a.c. part</b>	Must be taken under consideration for the installation.	<b>N/A</b>
15.2.2	<p><b>Labelling on the d.c. part</b></p> <p>All the junction boxes (PV generator and PV groups) and d.c. ducts must carry a visible and permanent marking indicating that live parts within these boxes may remain under voltage even after the inverter has been disconnected on the direct current side.</p>	Must be taken under consideration for the installation.	<b>N/A</b>
15.3.2	<p><b>Labelling on the inverter</b></p> <p>All inverters must bear a marking indicating that before any work is carried out, the two sources of voltage must be isolated.</p>	The unit is provided with the applicable marking	<b>P</b>
16.	<p><b>Technical file</b></p> <p>The technical file must include the following items drawn up in French:</p> <ul style="list-style-type: none"> <li>• A circuit diagram of the photovoltaic system;</li> <li>• The list of installed equipment mentioning the characteristics and references to the replacement parts (fuses, lightning arrester cartridges etc.);</li> <li>• An installation diagram for the various photovoltaic components and modules as well as the corresponding connections (ducts);</li> <li>• A description of the procedure for working on the photovoltaic system and safety instructions.</li> </ul>	The required information are stated in the manual.	<b>P</b>
17.	<b>Maintenance of photovoltaic installations</b>		<b>N/A</b>




<b>UTE C15-712-1</b>			
<b>Clause/§</b>	<b>Requirement</b>	<b>Remark</b>	<b>Verdict</b>
17.1	<p><b>General points</b></p> <p>The minimal technical maintenance work must be provided for during the life cycle of a photovoltaic installation to maintain or restore the installation to a state in which it can fulfil the function for which it was designed.</p>	Must be taken under consideration for the installation.	<b>N/A</b>
17.2	<p><b>Levels and frequency of maintenance</b></p> <p>A distinction is made between the following three levels of maintenance comprising:</p> <ul style="list-style-type: none"> <li>• Conditional maintenance based on monitoring of the key parameters of the installation;</li> <li>• Precautionary maintenance carried out according to the prognoses extrapolated from the analysis and evaluation of the key parameters concerning the degradation of the asset (e.g. corrosion);</li> <li>• Systematic maintenance carried out at predetermined intervals and without a prior check of the state of the product or its constituent components.</li> </ul>	Must be taken under consideration for the installation.	<b>N/A</b>
17.3	<p><b>Technical areas covered during maintenance</b></p> <p>A distinction is made between operations relating to the safety of persons and property, and actions relating to functional reliability.</p>	Must be taken under consideration for the installation.	<b>N/A</b>
<b>Annex A</b>			
<b>Agreements between the administrator of the public distribution network and the user/produce</b>			
A1	<p><b>Provisions for limiting effects adversely affecting supply quality</b></p> <p>The study of the connection by the administrator of the public distribution network requires the communication of the characteristic data for the project, the generators and the provisions for connection to the network. The administrator of the public distribution network may disclose data sheets summarising the minimum list of data required to study the request.</p>	Must be taken under consideration for the installation.	<b>N/A</b>
A2	<p><b>Choice of tripping device and approval</b></p> <p>The installation or modification of a tripping device must be subject to an agreement with the administrator of the public distribution network.</p> <p>This process must take account of the situation and the features at the point of delivery and must therefore, where necessary, be coordinated with the connection study for the site.</p>	Must be taken under consideration for the installation.	<b>N/A</b>

<b>UTE C15-712-1</b>			
<b>Clause/§</b>	<b>Requirement</b>	<b>Remark</b>	<b>Verdict</b>
A3	<p><b>Start-up by the administrator of the public distribution network</b></p> <p>For installations with a power of less than 250 kVA, this step is subject to prior submission of proof of conformity stamped by CONSUEL (Comité National pour la Sécurité des Usagers de l'Electricité, the National Committee for the Safety of Users of Electricity).</p>	Must be taken under consideration for the installation.	<b>N/A</b>
<p><b>Annex B</b></p> <p><b>Cables for photovoltaic installations - values for permissible currents</b></p> <p>(informative)</p>			
	Specific cables for photovoltaic installations have been refined in order to meet the needs of these installations. The tables below, taken from document UTE C 32-502, give the values for the permissible currents for cables compliant with this guide.	Must be taken under consideration for the installation.	<b>N/A</b>
<p><b>Annex C</b></p> <p><b>Keraunic levels in France and in the overseas departments</b></p> <p>(informative)</p>			
	<i>Note – To obtain the corresponding lightning density (Ng), simply divide Nk by 10.</i>		---

## Test Results

<b>14.1 IEC 60068-2-75 (Hammer test)</b>										<b>P</b>
Use methode	Swing hammer			Spring hammer			Vertical hammer			
	N/A			N/A			P			
	Severity									
Repeats	3 Hits unless otherwise specified									
Energy (J)	0,14	0,2	0,35	0,5	0,7	1	2	5	10	20
Mass (kg)	0,25						0,5	1,7	5	5
Radius (mm)	10						25	25	50	50
IK code	IK01	IK02	IK03	IK04	IK05	IK06	IK07	IK08	IK09	IK10
	N/A	N/A	N/A	N/A	N/A	N/A	P	N/A	N/A	N/A

Note:

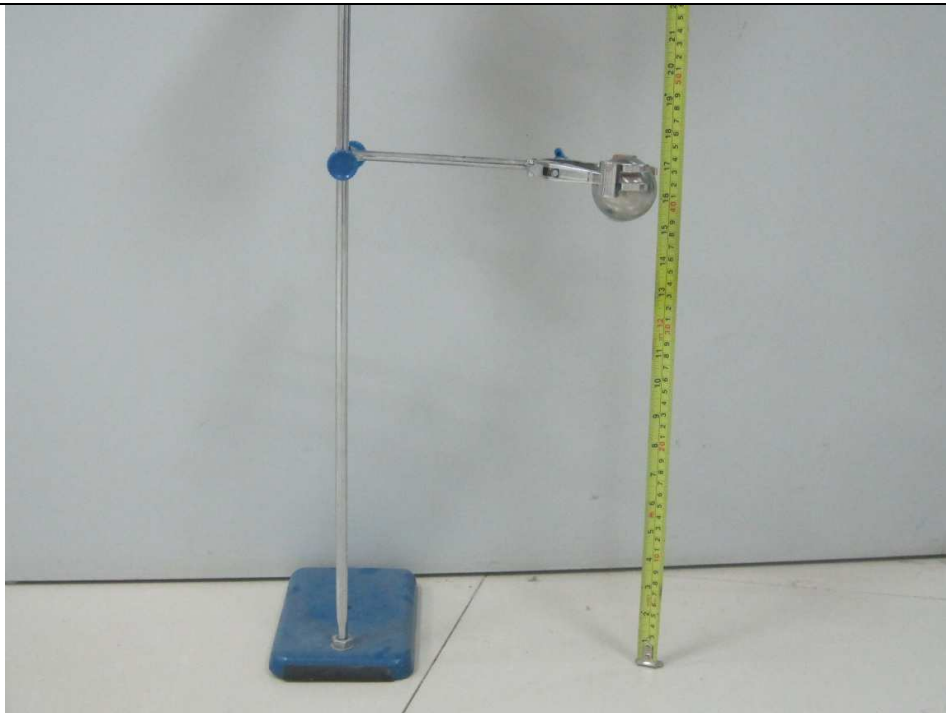

# Annex 1

## DIN V VDE V 0126-1-1/A1 VFR2014 Test Report

**DIN V VDE V 0126-1-1/A1 VFR2014**

Clause/§	Requirement	Remark	Verdict
----------	-------------	--------	---------

<b>1</b>	<b>Scope (Automatic disconnecting facility for photovoltaic installations)</b>		
----------	--	--	--

<b>2</b>	<b>Normative references</b>		
		DIN EN 50160:2003-03	
		DIN EN 50178 (VDE 0160):1998-04	
		DIN EN 60664-1 (VDE 0110-1)	
		E DIN VDE 0664-100:2005-05	
		DIN EN 61000-6-2	
		DIN EN61000-6-3	
		DIN EN 61008-1 (VDE 0664-10):2000-09	
		DIN VDE 0105-100:2000-06	
<b>4</b>	<b>Requirements:</b>		
	1. Monitoring of voltage and frequency derivation		
	2. Monitoring of DC-Injection		
	3. Monitoring of accidental anti Islanding		
	4. Monitoring of intended anti Islanding		
	5. Residual Current Monitoring Unit –RCMU (only if no galvanic separation)		
4.1	Functional safety: Automatic disconnecting facility	Considered, see annex. The single fault safe system was reviewed. The theoretical investigation was verified by error simulation.	<b>P</b>
4.1.1	Single fault safety of the automatic disconnecting facility	Considered, see block diagram, functional explanation and table 6.1 below.	<b>P</b>
4.1.2	Disconnection device: At least two independent disconnection devices. At least one relay and one switch with overvoltage category 2. If without galvanic separation then two relays are necessary	Disconnection takes place redundant through two relays and the IGBT-fullbridge in series. The relays and the IGBT-full bridge are able to switch the full current.	<b>P</b>
4.2	Monitoring of the voltage: Voltages $\leq 80\%$ and $\geq 115\%$ of $V_{nom}$ cause a disconnection within 0,2s (reconnection after min. 5s if voltage fluctuation $\leq 3s$ ; min. 30s if voltage fluctuation $> 3s$ ). Test voltage steps should not be below 77% and above 118% of $V_{nom}$ . Continuous over voltage above 110% up to 115% (adjustable, default setting 110%) causes disconnection after max. 10min. Re-connection after min. 30s.	Tested with a variable AC-Power supply at the output. Inverter disconnects within the limits, see table 6.2 below.	<b>P</b>

<b>DIN V VDE V 0126-1-1/A1 VFR2014</b>			
<b>Clause/§</b>	<b>Requirement</b>	<b>Remark</b>	<b>Verdict</b>
4.3	Monitoring of frequency: Frequencies $\leq 47,5\text{Hz}$ and $\geq 51,5\text{Hz}$ cause a disconnection within 0,2s (frequenz derivation 1Hz/s)	Tested with an AC-Source at the output. See table 6.3 below.	<b>P</b>
4.4	Monitoring of DC-Injection: DC error or DC-Currents $\geq 1\text{A}$ cause disconnection within 0,2s (positive and negative polarity)	The unit of photovoltaic inverter does provide galvanic separation (transformer) from input to output.	<b>N/A</b>
4.5	Detection of anti islanding: anti islanding causes disconnection within 5s (for multiple installations 0,2s if triggered external). For the detection of anti-islanding is only one of the following methods necessary: -6.5.1 Measurement of impedance or -6.5.2 Resonant circuit test or -6.5.3 3-phase grid-voltage monitoring	See table 6.5.2 below.	<b>P</b>
4.6	Marking: In case of an automatic disconnecting facility there is a note at the type plate necessary	Marking provided on the type label.	<b>P</b>
<b>4.7</b>	<b>Special requirements:</b>		
4.7.1	Photovoltaics: If without galvanic separation then a RCMU is necessary. Insulation resistance $> 1\text{k}\Omega/\text{V}$ , at least $500\text{k}\Omega$ . Slowly increasing DC-Leaking currents up to $300\text{mA}$ cause disconnection within 0,3s / Surge dc-leakage currents should lead to a disconnection of: -30mA within 0,3s -60mA within 0,15s -150mA within 0,04s  Before every connection to the grid, the d.c. array ground insulation has to be checked. (see 6.6.2.2.4).	The unit of photovoltaic inverter does provide galvanic separation (transformer) from input to output.	<b>N/A</b>
<b>5</b>	<b>General requirements:</b>		
	Electromagnetic compatibility (EMC)		
	Emitted interference <i>DIN EN 61000-6-3 (VDE 0839-6-3)</i>	Covered by EMC report, see test report EMC-D163747COC issued by STC (Dongguan) Company Limited.	<b>P</b>
	Interference resistance <i>DIN EN 61000-6-2 (VDE 0839-6-2)</i>	Covered by EMC report, see test report EMC-D163747COC issued by STC (Dongguan) Company Limited.	<b>P</b>
<b>6</b>	<b>Type test :</b>	See following test report	
<b>7.</b>	<b>Routine test:</b>	Routine testing described above	<b>P</b>
<b>8</b>	<b>Specification of installation:</b>		<b>P</b>
<b>Annex</b>			

**DIN V VDE V 0126-1-1/A1 VFR2014**

<b>Clause/§</b>	<b>Requirement</b>	<b>Remark</b>	<b>Verdict</b>
<b>A.1</b>	<b>Additional Methods of monitoring anti islanding:</b>	Additional Methods can be added	<b>N/A</b>
<b>A.4</b>	<b>Disconnection for a short period</b>	If frequency fluctuation of $\leq 3s$ occur, the reconnection after min. 5s is permitted.	<b>P</b>

<b>DIN V VDE V 0126-1-1/A1 VFR2014</b>		
<b>Clause</b>	<b>Test</b>	<b>Result</b>
6.1 (4.1)	Functional safety	<b>P</b>
6.2 (4.2)	Monitoring of voltage	<b>P</b>
6.3 (4.3)	Monitoring of frequency	<b>P</b>
6.4 (4.4)	Monitoring of DC-Injection	<b>N/A</b>
6.5 (4.5)	Detection of anti-islanding (only one method is necessary!)	
	6.5.1 Measurement of impedance	<b>N/A</b>
	6.5.2 Resonant circuit test	<b>P</b>
	6.5.3 3-phase grid-voltage monitoring	<b>N/A</b>
6.6 (4.7)	Residual Current Monitoring	<b>N/A</b>



## Test Results

6.1 Functional safety - fault condition tests								P
	ambient temperature [°C] :	23,7						—
	model/type of power supply :	DC : 62150H-1000S AC : 61512						—
	manufacturer of power supply :	Chroma						—
	rated markings of power supply :	DC: 0-1000V, 15kW AC: 0-300V, 18kW						—
component No.	fault	test condition		test time	fuse No.	fault condition		result
		AC	DC			AC	DC	
BUS voltage defect R166	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID25", Unit shutdown immediately, no damaged, no hazard. (BUS voltage fault)
BUS voltage defect R161	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID26", Unit shutdown immediately, no damaged, no hazard. (BUS voltage fault)
BUS voltage defect R172	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID26, ID66", Unit shutdown immediately, no damaged, no hazard. (BUS voltage fault)
BUS voltage defect R199	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID09, ID25", Unit shutdown immediately, no damaged, no hazard. (BUS voltage fault)
BUS voltage defect R208	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID09", Unit shutdown immediately, no damaged, no hazard. (BUS voltage fault)
BUS voltage defect R1	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID09, ID25", Unit shutdown immediately, no damaged, no hazard. (BUS voltage fault)
BUS voltage defect RD3	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID30", Unit shutdown immediately, no damaged, no hazard. (BUS voltage fault)
BUS voltage defect RD3	Short	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID10, ID26", Unit shutdown immediately, no damaged, no hazard. (BUS voltage fault)
BUS voltage defect RD13	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID30", Unit shutdown immediately, no damaged, no hazard. (BUS voltage fault)
BUS voltage defect RD13	Short	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID10, ID26", Unit shutdown immediately, no damaged, no hazard. (BUS voltage fault)

Mid voltage defect RD6	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID11, ID30", Unit shutdown immediately, no damaged, no hazard. (BUS current fault)
Mid voltage defect RD6	Short	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID15", Unit shutdown immediately, no damaged, no hazard. (BUS current fault)
Mid voltage defect RD17	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID11, ID30", Unit shutdown immediately, no damaged, no hazard. (BUS current fault)
Mid voltage defect RD17	Short	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID15", Unit shutdown immediately, no damaged, no hazard. (BUS current fault)
BAT voltage defect R255	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID05", Unit shutdown immediately, no damaged, no hazard. (BAT voltage fault)
BAT voltage defect R221	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID05", Unit shutdown immediately, no damaged, no hazard. (BAT voltage fault)
Grid voltage defect R245	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID01, ID04, ID49, ID50", Unit shutdown immediately, no damaged, no hazard. (Grid voltage fault)
Grid voltage defect R248	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID01, ID04, ID49, ID50", Unit shutdown immediately, no damaged, no hazard. (Grid voltage fault)
INV voltage defect R264	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID12, ID31", Unit shutdown immediately, no damaged, no hazard. (INV voltage fault)
INV voltage defect R265	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID12, ID31", Unit shutdown immediately, no damaged, no hazard. (INV voltage fault)
Buck-boost current detect IC U22B Pin9 and pin10	Short	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID30", Unit shutdown immediately, no damaged, no hazard. (Buck-boost current fault)
Buck-boost current detect R176	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID30", Unit shutdown immediately, no damaged, no hazard. (Buck-boost current fault)
Buck-boost current detect R179	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID11, ID30", Unit shutdown immediately, no damaged, no hazard. (Buck-boost current fault)
Buck-boost current detect R177	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID11, ID30", Unit shutdown immediately, no damaged, no hazard. (Buck-boost current fault)

Buck-boost current detect IC U22C Pin9 and pin10	Short	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID11", Unit shutdown immediately, no damaged, no hazard. (Buck-boost current fault)
Buck-boost current detect R213	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID11, ID30", Unit shutdown immediately, no damaged, no hazard. (Buck-boost current fault)
DC current detect R263	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID18", Unit shutdown immediately, no damaged, no hazard. (DC current fault)
DC current detect R254	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID18", Unit shutdown immediately, no damaged, no hazard. (DC current fault)
DC current detect R255	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID18, ID28", Unit shutdown immediately, no damaged, no hazard. (DC current fault)
DC current detect U39C Pin9 and pin10	Short	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID18, ID28", Unit shutdown immediately, no damaged, no hazard. (DC current fault)
INV current detect R164	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID29", Unit shutdown immediately, no damaged, no hazard. (INV current fault)
INV current detect R165	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID29", Unit shutdown immediately, no damaged, no hazard. (INV current fault)
INV current detect R174	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID10, ID29", Unit shutdown immediately, no damaged, no hazard. (INV current fault)
INV current detect U22C Pin9 and pin10	Short	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID29, ID31", Unit shutdown immediately, no damaged, no hazard. (INV current fault)
INV current detect R193	Short	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID10, ID29", Unit shutdown immediately, no damaged, no hazard. (INV current fault)
Grid current detect R234	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID31, ID70", Unit shutdown immediately, no damaged, no hazard. (Grid current fault)
Grid current detect R235	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID31, ID70", Unit shutdown immediately, no damaged, no hazard. (Grid current fault)
Grid current detect U39B Pin5 and pin6	Short	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID31, ID70", Unit shutdown immediately, no damaged, no hazard. (Grid current fault)

BAT current detect R532	Short	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID27", Unit shutdown immediately, Q54, Q59, Q64, Q65 damaged, no hazard. (BAT current fault)
BAT current detect U53 Pin2 and pin3	Short	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID27", Unit shutdown immediately, Q54, Q59, Q64, Q65 damaged, no hazard. (BAT current fault)
BAT current detect R535	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID12, ID27", Unit shutdown immediately, no damaged, no hazard. (BAT current fault)
BAT current detect R537	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID12, ID27", Unit shutdown immediately, no damaged, no hazard. (BAT current fault)
INV drive detect R452	Short	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID31, ID70", Unit shutdown immediately, no damaged, no hazard. (INV current fault)
INV drive detect R454	Short	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID31, ID70", Unit shutdown immediately, no damaged, no hazard. (INV current fault)
INV drive detect R472	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID31, ID70", Unit shutdown immediately, no damaged, no hazard. (INV current fault)
INV drive detect R473	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID31, ID70", Unit shutdown immediately, no damaged, no hazard. (INV current fault)
Relay drive detect R485	Open Before start up	230V, 0,02A	50V, 0,15A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID55", Unit can't start up, Q53 damaged, no hazard. (Relay fault)
Relay drive detect R607	Open Before start up	230V, 0,02A	50V, 0,15A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID55", Unit can't start up, no damaged, no hazard. (Relay fault)
Relay drive detect R608	Open Before start up	230V, 0,02A	50V, 0,15A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID55", Unit can't start up, no damaged, no hazard. (Relay fault)
Relay defect RY1	Short before start-up	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID31, ID66", Unit can't start up, no damaged, no hazard. (Relay fault)
Relay defect RY2	Short before start-up	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID31, ID66", Unit can't start up, no damaged, no hazard. (Relay fault)
Relay defect RYG3	Short before start-up	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID31, ID66", Unit can't start up, no damaged, no hazard. (Relay fault)
Grid voltage detect R18	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID01", Unit shutdown immediately, no damaged, no hazard. (Grid voltage fault)


Grid voltage detect R18	Short	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID31", Unit shutdown immediately, no damaged, no hazard. (Grid voltage fault)
Grid voltage detect R50	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID31", Unit shutdown immediately, no damaged, no hazard. (Grid voltage fault)
Grid voltage detect R50	Short	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID01", Unit shutdown immediately, no damaged, no hazard. (Grid voltage fault)
Grid voltage detect R54	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID31", Unit shutdown immediately, no damaged, no hazard. (Grid voltage fault)
Grid voltage detect R54	Short	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID01", Unit shutdown immediately, no damaged, no hazard. (Grid voltage fault)
Grid voltage detect R22	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID01", Unit shutdown immediately, no damaged, no hazard. (Grid voltage fault)
Grid voltage detect R22	Short	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID31", Unit shutdown immediately, no damaged, no hazard. (Grid voltage fault)
Grid current detect HCT2 pin 13 and pin 14	Short	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID29, ID31", Unit shutdown immediately, no damaged, no hazard. (Grid current fault)
Grid current detect U1A pin 2 and pin 3	Short	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID29, ID31", Unit shutdown immediately, no damaged, no hazard. (Grid current fault)
Grid current detect U1B pin 5 and pin 6	Short	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID29, ID31", Unit shutdown immediately, no damaged, no hazard. (Grid current fault)
Grid current detect R10	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID29, ID31", Unit shutdown immediately, no damaged, no hazard. (Grid current fault)
Grid current detect C7	Short	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID29, ID31", Unit shutdown immediately, no damaged, no hazard. (Grid current fault)
DCI detect R5	Short	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID17", Unit shutdown immediately, no damaged, no hazard. (DCI fault)
DCI detect RG634	Short	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID17", Unit shutdown immediately, no damaged, no hazard. (DCI fault)

Loss of control U11 pin 58	Short	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID53", Unit shutdown immediately, no damaged, no hazard. (SPI communication fault)
Loss of control U10 pin 44	Short	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID53", Unit shutdown immediately, no damaged, no hazard. (SPI communication fault)
Loss of control U10 pin 47	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID53", Unit shutdown immediately, no damaged, no hazard. (SPI communication fault)
Loss of control U10 pin 72	Open	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID53, ID54", Unit shutdown immediately, no damaged, no hazard. (SPI communication fault)
Loss of control XL1	Short	230V 13,0A	50V 65A	2min	--	230V, 0,02A	50V, 0,15A	Error message "ID49, ID54", Unit shutdown immediately, no damaged, no hazard. (SPI communication fault)
The errors in the control circuit simulate that the safety is even ensured during single fault.								

6.2 (4.2) Voltage monitoring							P		
<b>Test conditions:</b>	Output power: 1000W Frequency: 50Hz								
	<b>Under Voltage</b>				<b>Over Voltage</b>				
Parameter	Voltage	Time [ms]			Voltage	Time [ms]			
Limit	<b>184,0V</b>	<b>&lt;= 200ms</b>			<b>264,5V</b>	<b>&lt;= 200 ms</b>			
Trip value	184,3V				263,7V				
Disconnection time	188V to 178V	160	167	152	258V to 268V	167	146	160	
	230V to 178V	158	151	160	230V to 268V	168	179	169	
Reconnection time ( fluctuation <=3s):	>= 5s	N/A			>= 5s	N/A			
Reconnection time ( fluctuation >3s):	>= 30s	71 s			>= 30s	71 s			
<b>Note:</b> Lower and upper threshold voltage shall not fall or rise below or above 3% of the threshold voltage itself (min. 177,1V; max. 270,9V). The measurement shall take place at nominal frequency and any power.									



### Under voltage:

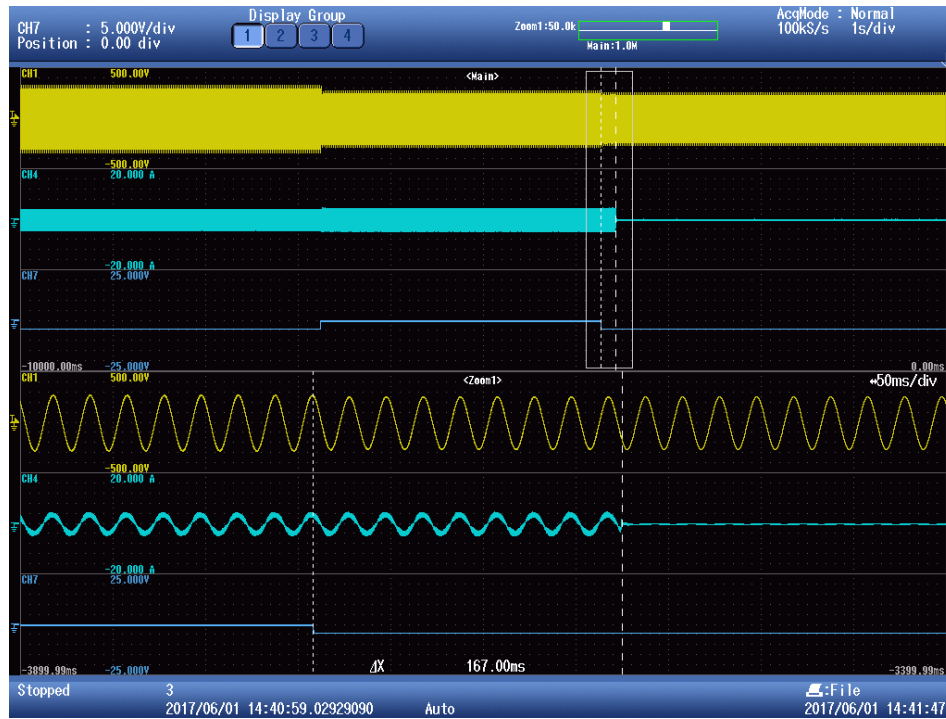

### Over voltage:





## Island 50Hz

<b>6.2 (4.2) Voltage monitoring according protection de Découplage pour le Raccordement d'une production décentralisée en HTA et en BT dans les zones non interconnectées, référentiel technique – SEI REF 04, V5</b>							<b>P</b>		
<b>Test conditions:</b>	Output power: 1000W Frequency: 50Hz								
	<b>Under Voltage</b>					<b>Over Voltage</b>			
Parameter	Voltage	Time [ms]			Voltage	Time [ms]			
Limit	<b>195,5V</b>	<b>&lt;= 200ms</b>			<b>255,3V</b>	<b>&lt;= 200 ms</b>			
Trip value	195,1V				255,2V				
Disconnection time	200V to 190V	166	171	178	250V to 260V	155	152	170	
	230V to 190V	172	168	161	230V to 260V	157	177	179	
Reconnection time ( fluctuation <=3s):	>= 5s	N/A			>= 5s	N/A			
Reconnection time ( fluctuation >3s):	>= 30s	71 s			>= 30s	66 s			
<b>Note:</b> Lower and upper threshold voltage shall not fall or rise below or above 3% of the threshold voltage itself (min. 177,1V; max. 270,9V). The measurement shall take place at nominal frequency and any power.									

### Under voltage:





### Over voltage:




## Island 60Hz

<b>6.2 (4.2) Voltage monitoring according contrat de raccordement, d'accès et d'exploitation (CRAE) pour une installation de production photovoltaïque raccordée au réseau public d'électricité</b>							<b>P</b>		
<b>Test conditions:</b>	Output power: 1000W Frequency: 60Hz								
	<b>Under Voltage</b>					<b>Over Voltage</b>			
Parameter	Voltage	Time [ms]			Voltage	Time [ms]			
Limit	<b>195,5V</b>	<b>&lt;= 200ms</b>			<b>264,5V</b>	<b>&lt;= 200 ms</b>			
Trip value	195,1V				263,7V				
Disconnection time	200V to 190V	166	171	178	258V to 268V	167	146	160	
	230V to 190V	172	168	161	230V to 268V	168	179	169	
Reconnection time ( fluctuation <=3s):	>= 5s	N/A			>= 5s	N/A			
Reconnection time ( fluctuation >3s):	>= 30s	71 s			>= 30s	71 s			
<b>Note:</b> Lower and upper threshold voltage shall not fall or rise below or above 3% of the threshold voltage itself (min. 177,1V; max. 270,9V). The measurement shall take place at nominal frequency and any power.									

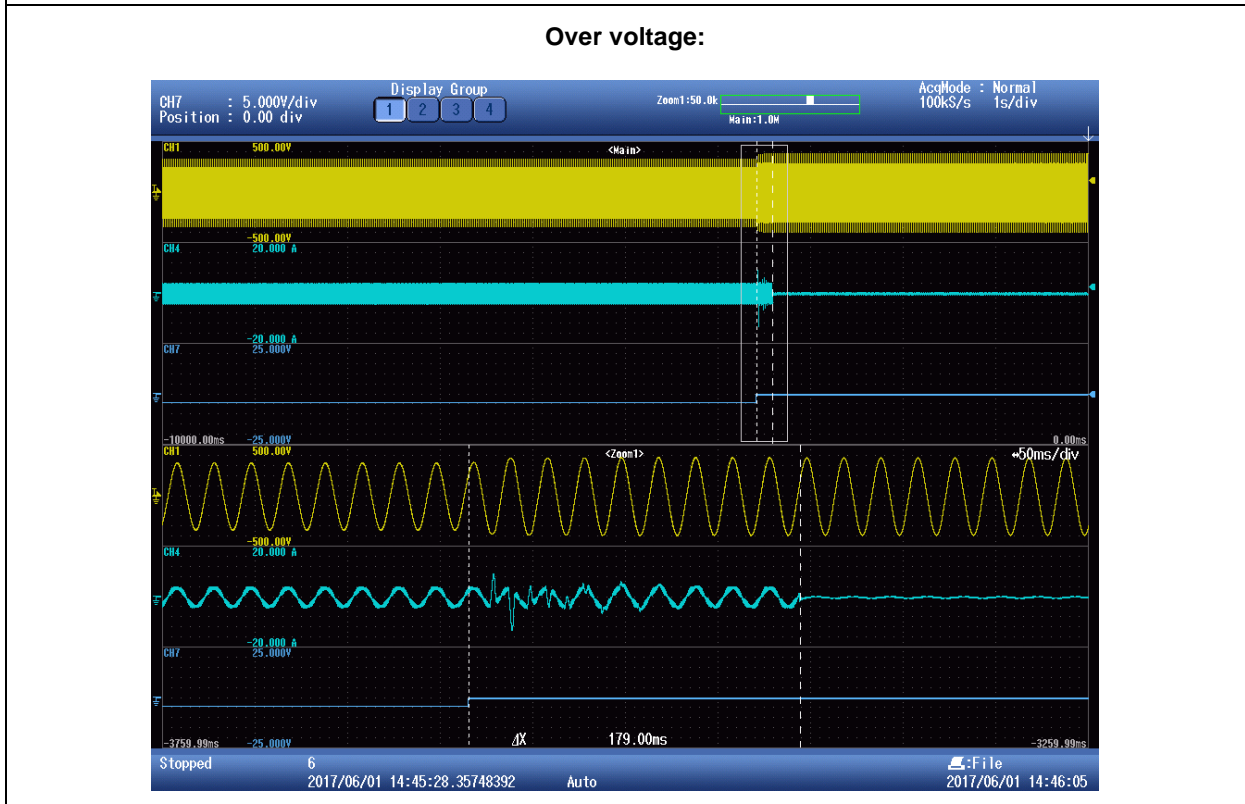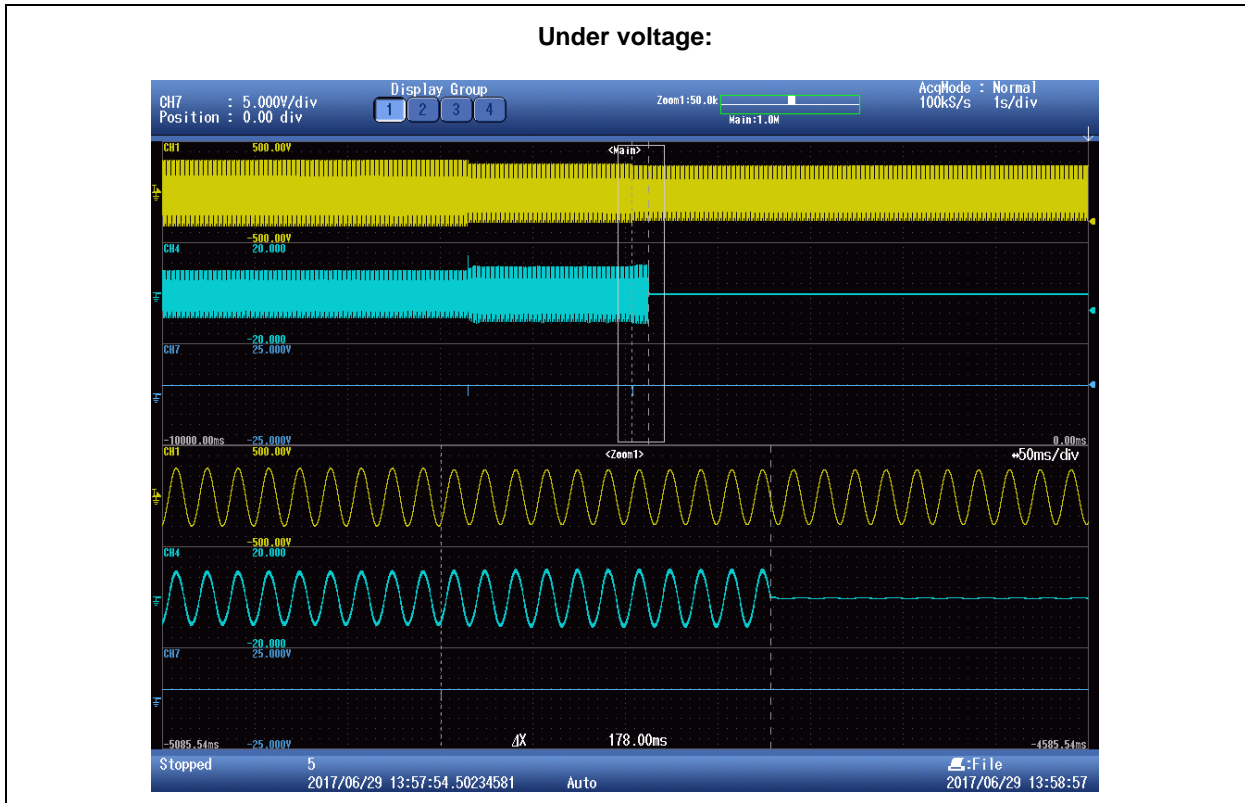


6.2 (4.2.3) Overvoltage protection according to DIN EN 50160:2000-03, 2.3		P
Setting values:	Setting U> [V]	253
	Setting T <sub>disconnection</sub> U> [s]	600
	Setting T <sub>disconnection</sub> [ms]	200
Test:		
	Disconnection time:	Limit:
The voltage is set to 100% U <sub>n</sub> and held for 600 s. Thereafter the voltage is set to 112% U <sub>n</sub> . Disconnection must take place within 600 s.		
a)	Phase 1	508 s
	Phase 2	--
	Phase 3	--
		≤ 600 s
The voltage is set to U <sub>n</sub> for 600 s and then to 108% U <sub>n</sub> for 600 s. No disconnection should take place.		
b)	Phase 1	No disconnection
	Phase 2	--
	Phase 3	--
		Disconnection should not take place.
The voltage is set to 106 % U <sub>n</sub> and held for 600 s. Thereafter the voltage is set to 114 % U <sub>n</sub> . Disconnection must take place within 300 s or about 50 % of the disconnection time measured in point a).*		
c)	Phase 1	247 s
	Phase 2	--
	Phase 3	--
		300 s
<b>Note:</b>		


a) Voltage set to 112 %  $U_n$ :

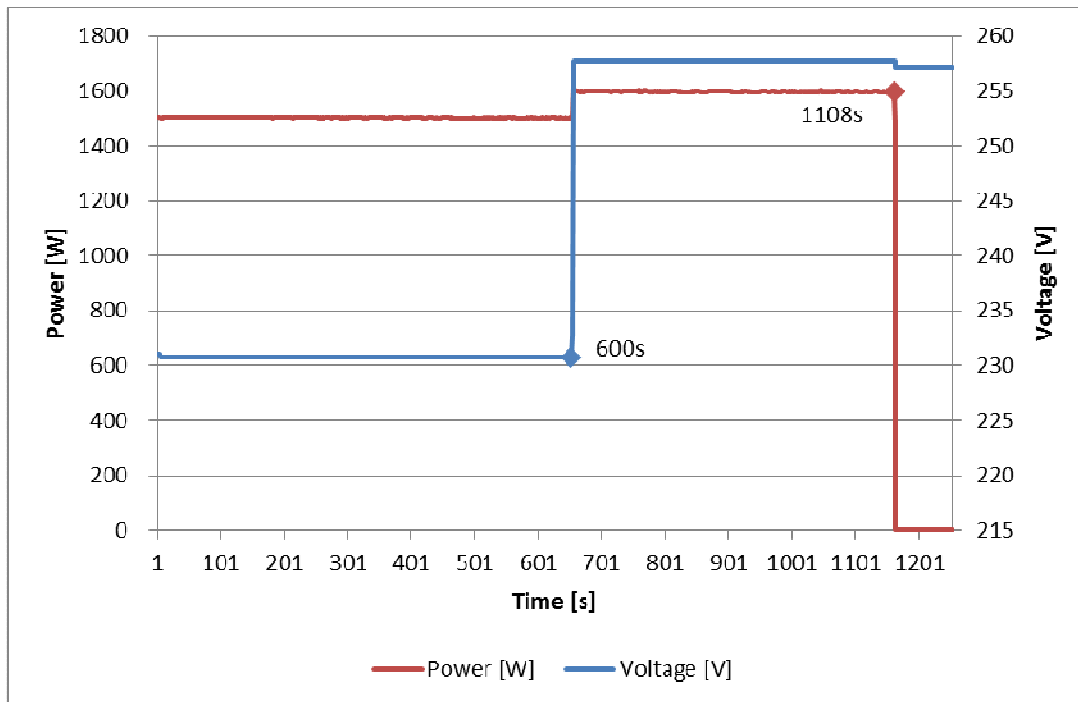

b) Voltage set to 108%  $U_n$ :

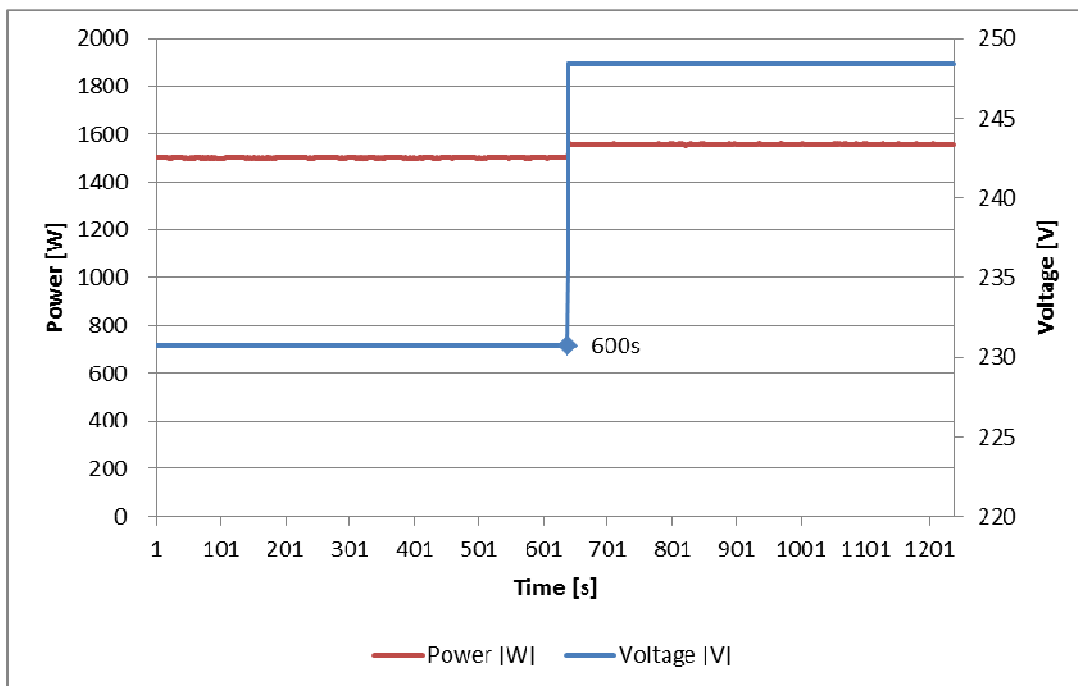

c) Voltage set to 106 %  $U_n$ , thereafter 114%  $U_n$ :

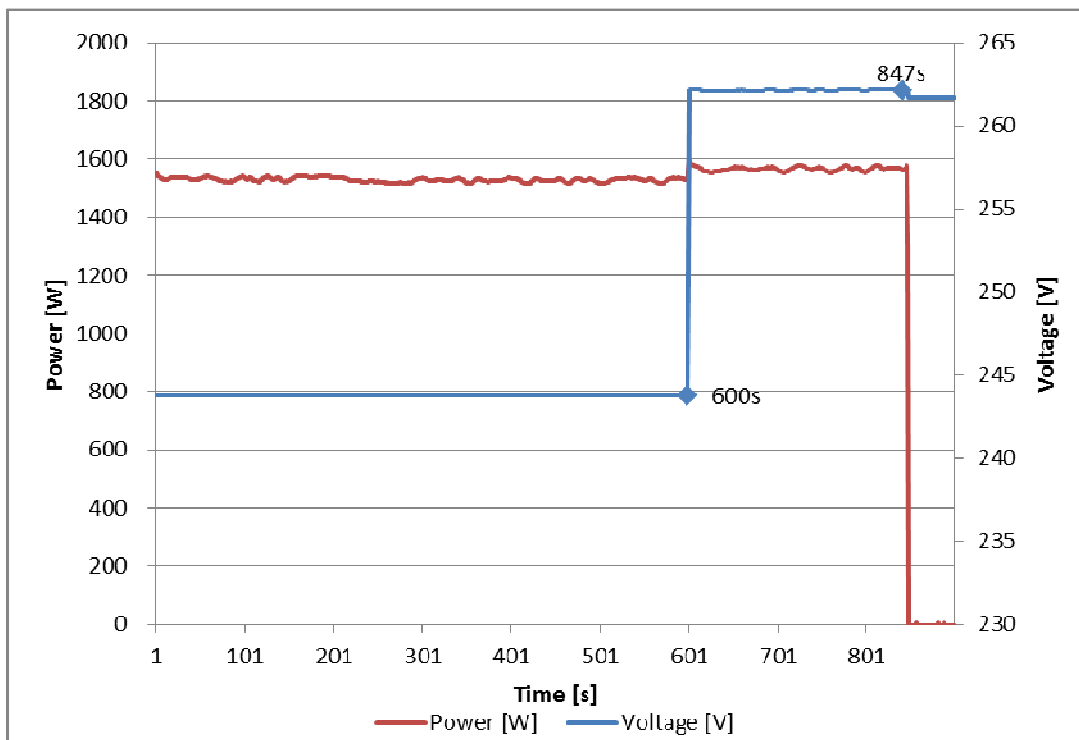

6.3 (4.3) Frequency monitoring DIN V VDE V 0126-1-1/A1 VFR2014								P
Test conditions:	Output power: 1000W							
	Under frequency				Over frequency			
Parameter	Frequency [Hz]	Time [ms]			Frequency [Hz]	Time [ms]		
Output Voltage		80%U <sub>N</sub>	U <sub>N</sub>	115%U <sub>N</sub>		80%U <sub>N</sub>	U <sub>N</sub>	115%U <sub>N</sub>
Limit	47,5Hz	<= 200ms			50,6Hz	<= 200ms		
Trip value		47,50Hz	47,50Hz	47,50Hz		50,60Hz	50,60Hz	50,60Hz
Disconnection time (ms)	48,00Hz to 47,00Hz	181	178	181	50,00Hz to 51,00Hz	175	175	165
		160	182	191		169	169	169
Reconnection time (fluctuation <=3s):	>= 5s	N/A			>= 5s	N/A		
Reconnection time (fluctuation >3s):	>=30s	71 s			>= 30s	71 s		
<p>Note:</p> <p>It was measured at a continuous change of frequency of 1Hz/s at lower, nominal and upper U<sub>N</sub> and arbitrary output power. The trip value was determined manually by reducing the frequency in 10mHz steps. When the trip value is known (e.g. 47,50Hz), the ac-source is programmed to run from e.g. 48,00Hz to 47,00Hz with 1Hz/s. The disconnection time is calculated by the measured time minus the 500ms from 48,00Hz to 47,50Hz.</p>								



### Underfrequency:



### Overfrequency:



6.3 (4.3) Frequency monitoring DIN V VDE V 0126-1-1:2006-02/A1:2012-02								P	
Test conditions:		Output power: 1000W							
		Under frequency			Over frequency				
Parameter	Frequency [Hz]	Time [ms]			Frequency [Hz]	Time [ms]			
Output Voltage		80%U <sub>N</sub>	U <sub>N</sub>	115%U <sub>N</sub>		80%U <sub>N</sub>	U <sub>N</sub>	115%U <sub>N</sub>	
Limit	47,5Hz	<= 200ms			51,5Hz	<= 200ms			
Trip value		47,50Hz	47,50Hz	47,50Hz		51,50Hz	51,50Hz	51,50Hz	
Disconnection time (ms)	48,00Hz to 47,00Hz	181	178	181	51,00Hz to 52,00Hz	179	161	164	
		160	182	191		171	174	174	
Reconnection time (fluctuation <=3s):	>= 5s	N/A			>= 5s	N/A			
Reconnection time (fluctuation >3s):	>= 60s	71 s			>= 60s	71 s			
<p>Note:</p> <p>It was measured at a continuous change of frequency of 1Hz/s at lower, nominal and upper U<sub>N</sub> and arbitrary output power. The trip value was determined manually by reducing the frequency in 10mHz steps. When the trip value is known (e.g. 47,50Hz), the ac-source is programmed to run from e.g. 48,00Hz to 47,00Hz with 1Hz/s. The disconnection time is calculated by the measured time minus the 500ms from 48,00Hz to 47,50Hz.</p>									

### Underfrequency:




### Overfrequency:



## Island 50Hz

<b>6.3 (4.3) Frequency monitoring according protection de Découplage pour le Raccordement d'une production décentralisée en HTA et en BT dans les zones non interconnectées, référentiel technique – SEI REF 04, V5</b>							<b>P</b>	
<b>Test conditions:</b>	Output power: 1000W							
	<b>Under frequency</b>				<b>Over frequency</b>			
Parameter	Frequency [Hz]	Time [ms]			Frequency [Hz]	Time [ms]		
Output Voltage		80%U <sub>N</sub>	U <sub>N</sub>	111%U <sub>N</sub>		80%U <sub>N</sub>	U <sub>N</sub>	111%U <sub>N</sub>
Limit	46,0Hz	200ms	200ms	200ms	52,0Hz	200ms	200ms	200ms
Trip value		46,00Hz	46,00Hz	46,00Hz		52,00Hz	52,00Hz	52,00Hz
Disconnection time (ms)	46,5Hz to 45,5Hz	185	174	189	51,5Hz to 52,5Hz	179	161	164
		184	179	182		171	174	174
Reconnection time (fluctuation <=3s):	>= 5s	N/A			>= 5s	N/A		
Reconnection time (fluctuation >3s):	>= 60s	71 s			>= 60s	71 s		
<p>Note:</p> <p>It was measured at a continuous change of frequency of 1Hz/s at lower, nominal and upper U<sub>N</sub> and arbitrary output power. The trip value was determined manually by reducing the frequency in 10mHz steps. When the trip value is known (e.g. 46,00Hz), the ac-source is programmed to run from e.g. 46,50Hz to 45,50Hz with 1Hz/s. The disconnection time is calculated by the measured time minus the 500ms from 46,50Hz to 45,50Hz.</p>								

### Underfrequency:

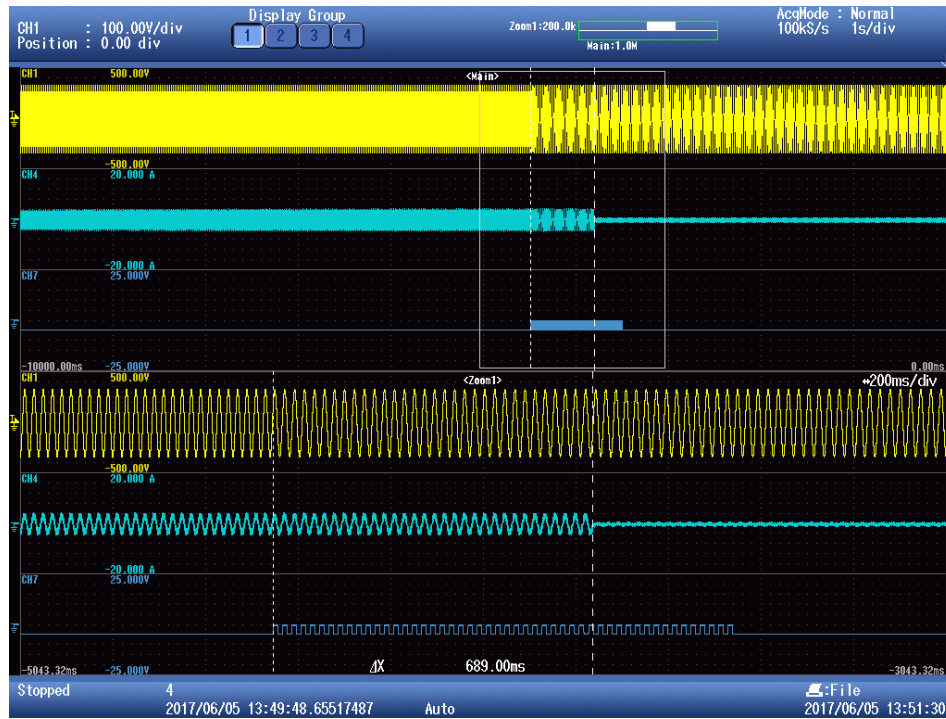


### Overfrequency:



## Island 60Hz

6.3 (4.3) Frequency monitoring according contrat de raccordement, d'accès et d'exploitation (CRAE) pour une installation de production photovoltaïque raccordée au réseau public d'électricité								P
Test conditions:	Output power: 1000W							
	Under frequency				Over frequency			
Parameter	Frequency [Hz]	Time [ms]			Frequency [Hz]	Time [ms]		
Output Voltage		85%U <sub>N</sub>	U <sub>N</sub>	115%U <sub>N</sub>		85%U <sub>N</sub>	U <sub>N</sub>	115%U <sub>N</sub>
Limit	55,0Hz	200ms	200ms	200ms	62,5Hz	200ms	200ms	200ms
Trip value		55,00Hz	54,99Hz	54,99Hz		62,50Hz	62,50Hz	62,50Hz
Disconnection time (ms)	55,5Hz to 54,5Hz	102	100	110	62,0Hz to 63,0Hz	184	164	173
		110	104	112		182	167	184
Reconnection time (fluctuation <=3s):	>= 5s	N/A			>= 5s	N/A		
Reconnection time (fluctuation >3s):	>= 60s	70 s			>= 60s	71 s		
<p>Note:</p> <p>It was measured at a continuous change of frequency of 1Hz/s at lower, nominal and upper U<sub>N</sub> and arbitrary output power. The trip value was determined manually by reducing the frequency in 10mHz steps. When the trip value is known (e.g. 55,00Hz), the ac-source is programmed to run from e.g. 55,50Hz to 54,50Hz with 1Hz/s. The disconnection time is calculated by the measured time minus the 500ms from 55,50Hz to 54,50Hz.</p>								

### Underfrequency:


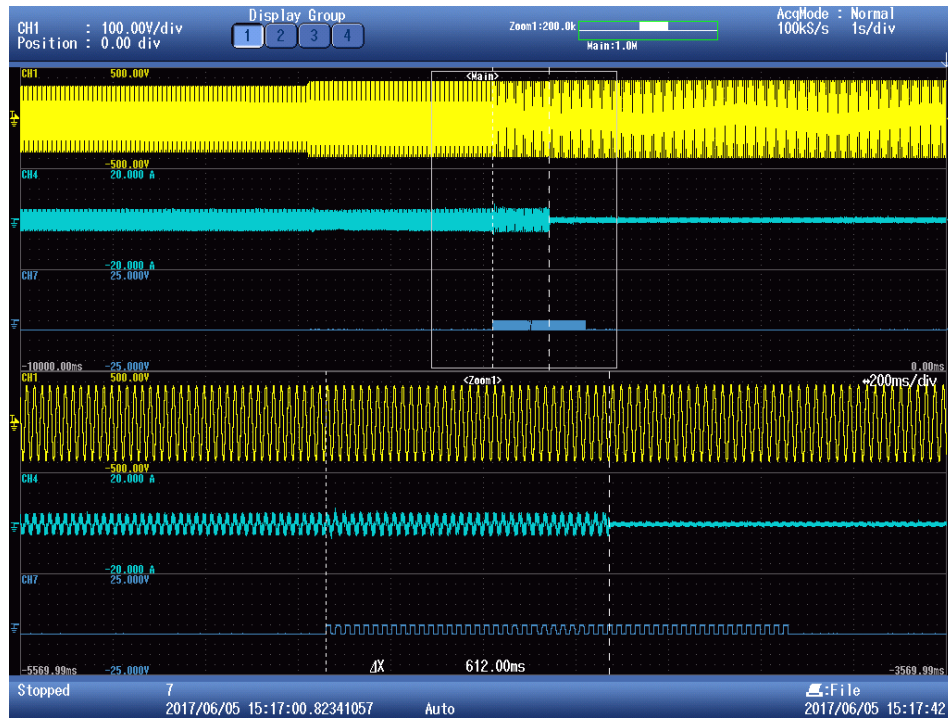



### Overfrequency:



<b>6.5 (4.5) Detection of Anti-Islanding</b>			<b>P</b>
<b>6.5.2 Resonant circuit test</b>			<b>P</b>
<b>Test conditions:</b>	Frequency: 50+/-0,2Hz $U_N=230\pm 3V_{ac}$ RLC consumes inverter real power within +/-3% Distortion factor of chokes <3% Quality $Q>2$		
Disconnection limit:	5s		
Output power:	25%	50%	100%
Osc. Parameter			
- 5%	180	159	169
- 4%	187	170	173
- 3%	172	168	173
- 2%	186	167	179
- 1%	594	182	463
0 %	769	828	505
+1 %	202	182	172
+2 %	168	182	176
+3 %	188	182	167
+4 %	182	173	176
+5 %	171	170	158
Parameter at 0%	$L= 92,66 \text{ mH}$ $R= 69,61 \Omega$ $C= 108,85 \mu\text{F}$	$L= 54,81 \text{ mH}$ $R= 34,80 \Omega$ $C= 184,13 \mu\text{F}$	$L= 27,99 \text{ mH}$ $R= 17,75 \Omega$ $C= 361,63 \mu\text{F}$
<b>Note:</b> The capacitors and the Chokes of the resonant circuit were adjusted in order to reach a quality of >2. $P_{QC}+P_{QL}=-P_{Q,WR}$ . The resitors of the resonant circuit consumed the real power of the inverter ( $P_{WR}$ ) within +/- 3%.			



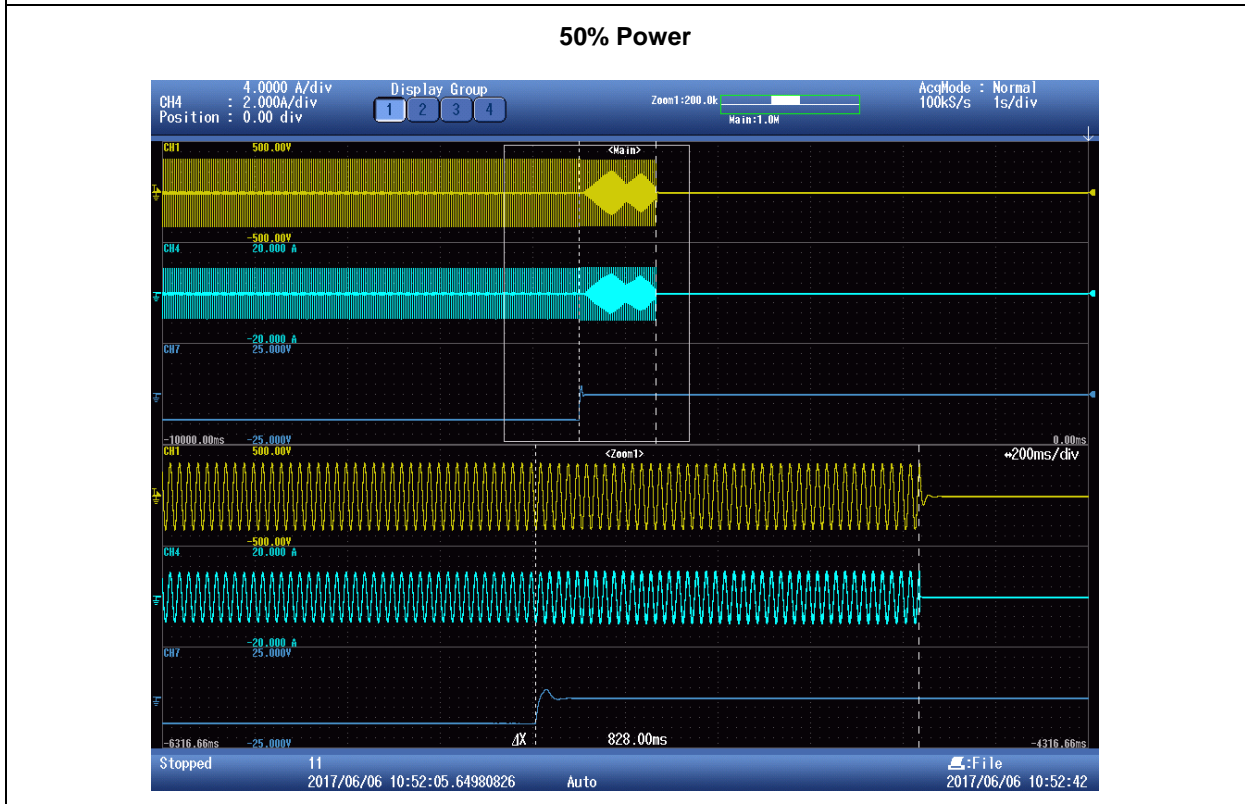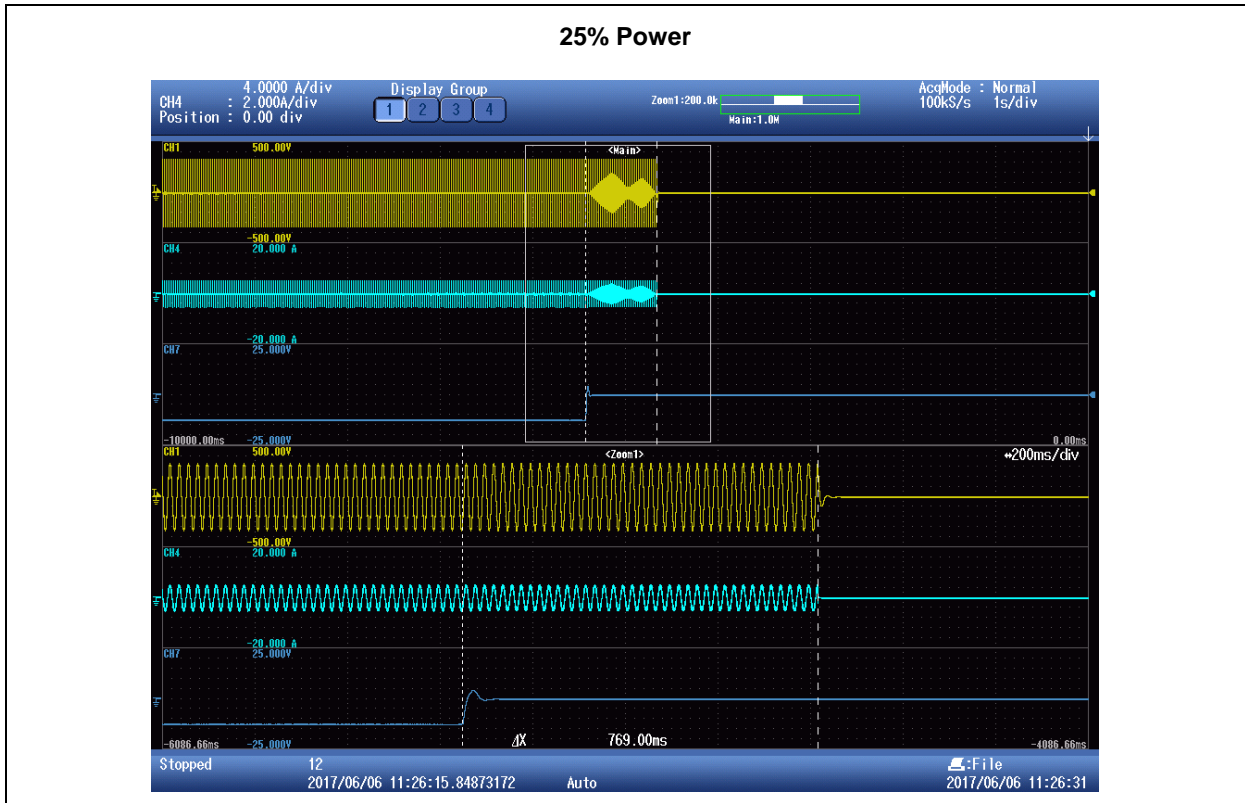

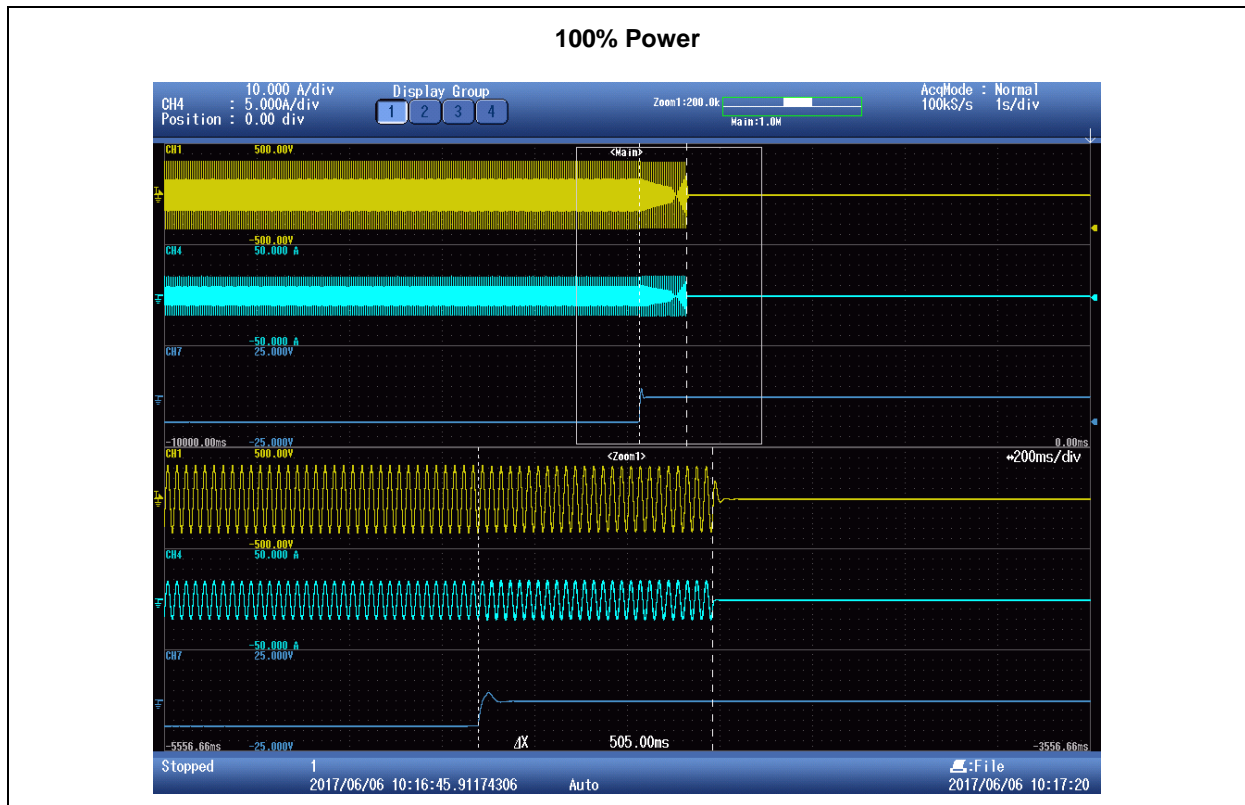

# Annex 2

## Pictures of the unit

### General view - 1




### General view - 2



### Enclosure bottom view:




### Internal view - 1

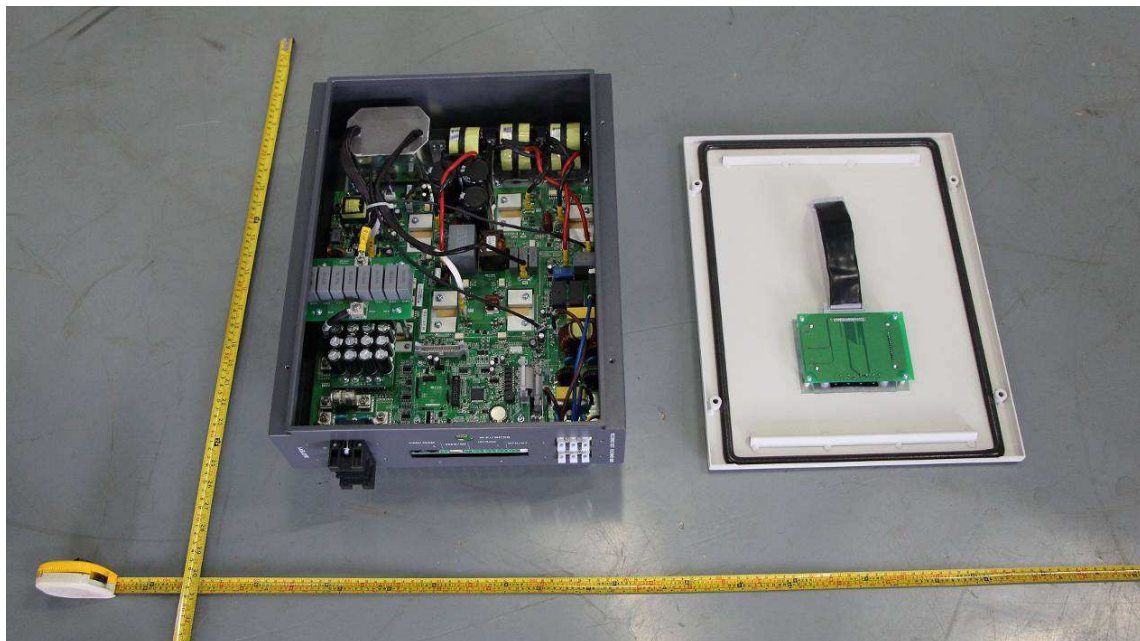





### Internal view - 2

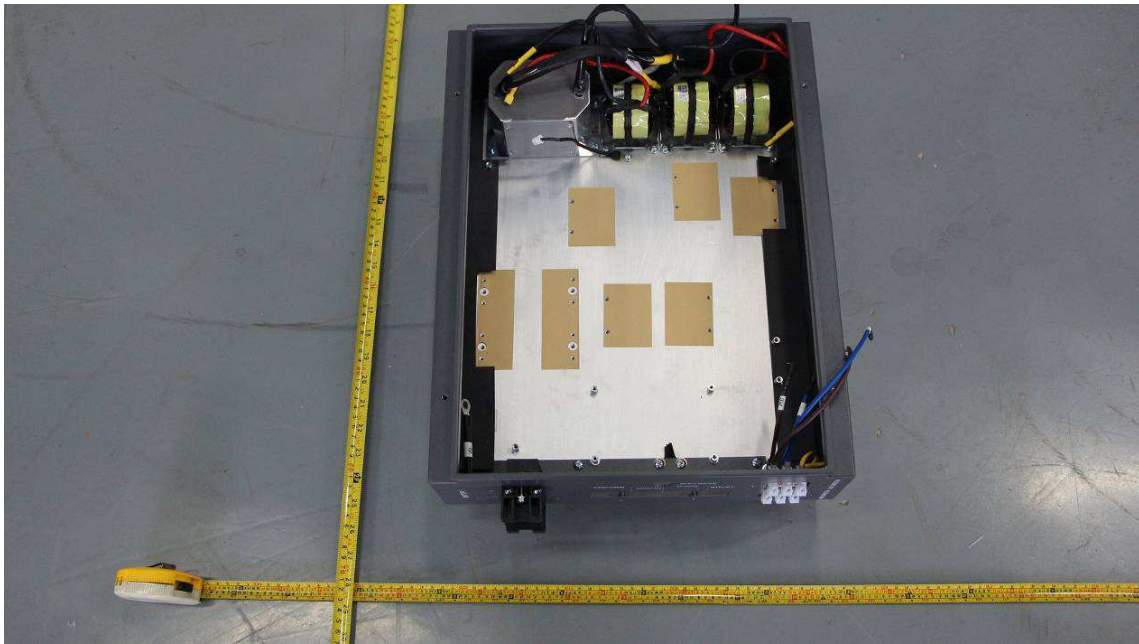

### Main board \_component side view

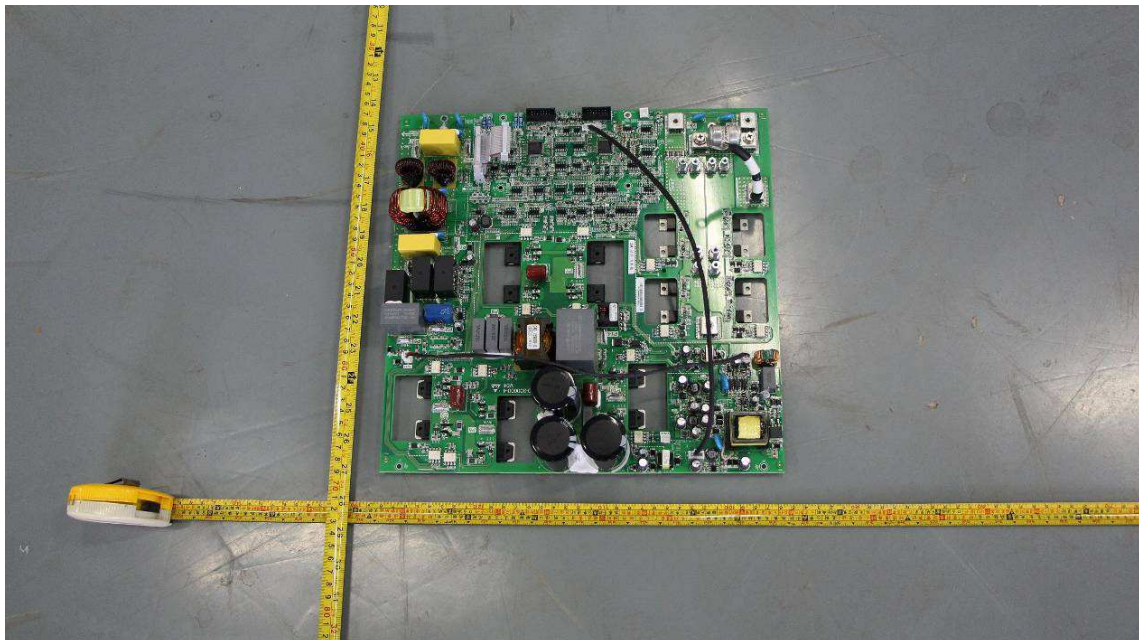

**Main board\_Solder side view**

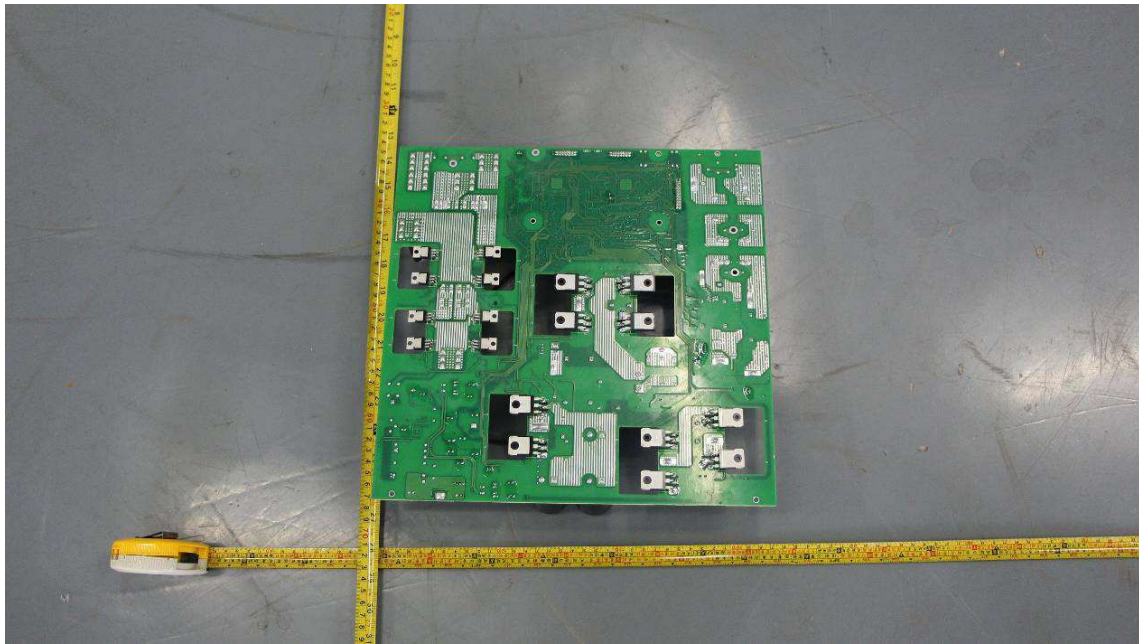


**BUS board \_component side view**






**BUS board\_Solder side view**

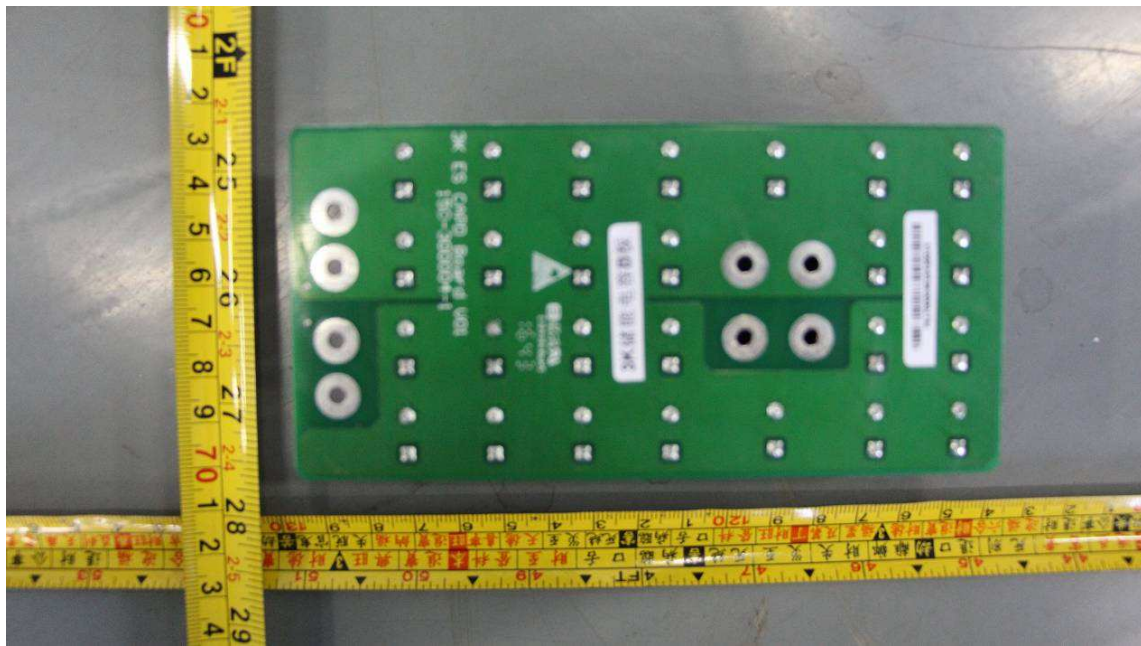


**CAP board\_component side view**

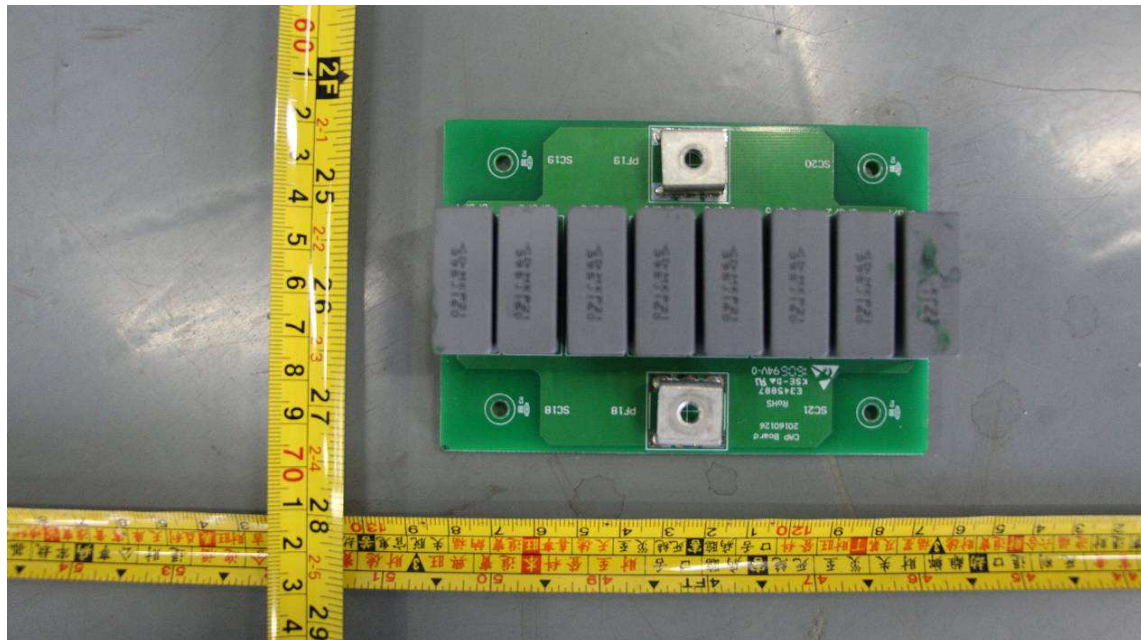





### CAP board\_Solder side view

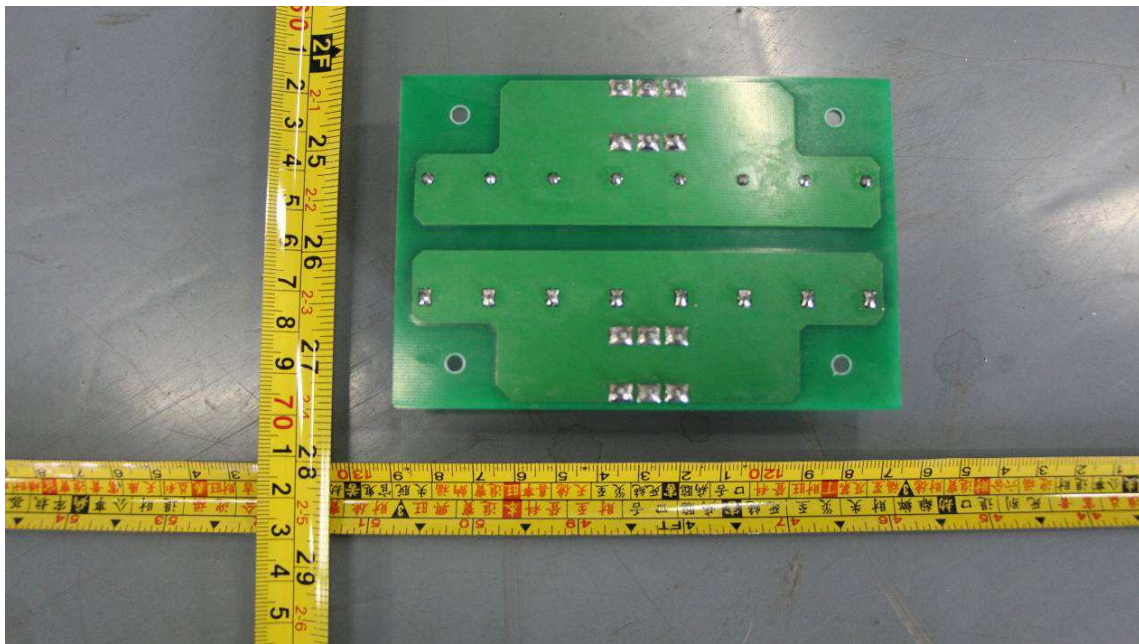


### Communication board\_component side view

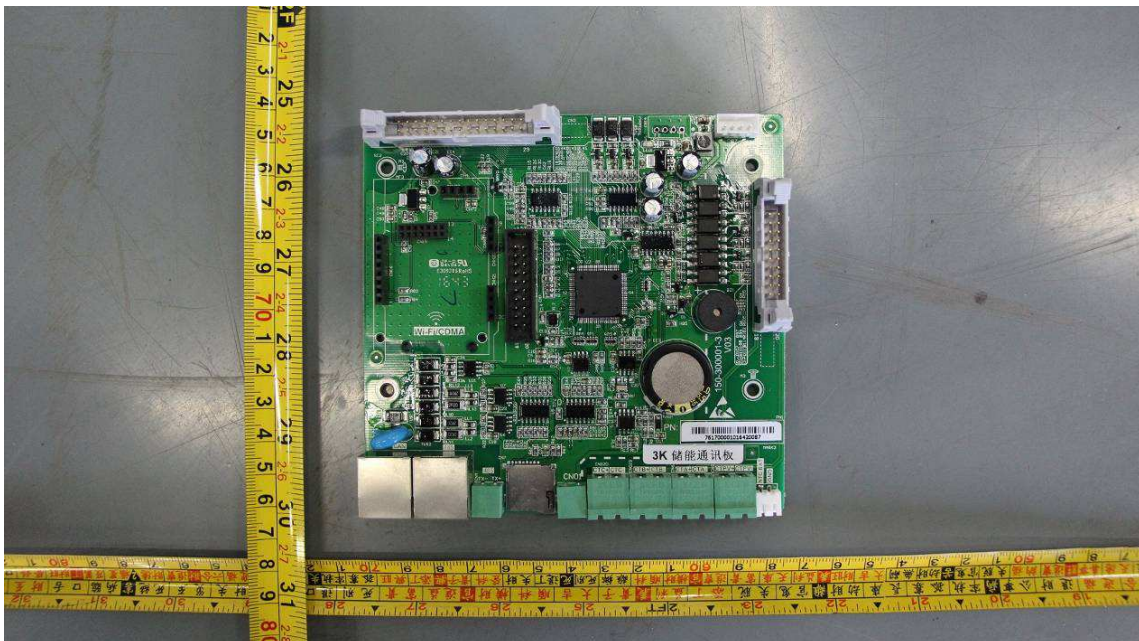

### Communication board\_Solder side view

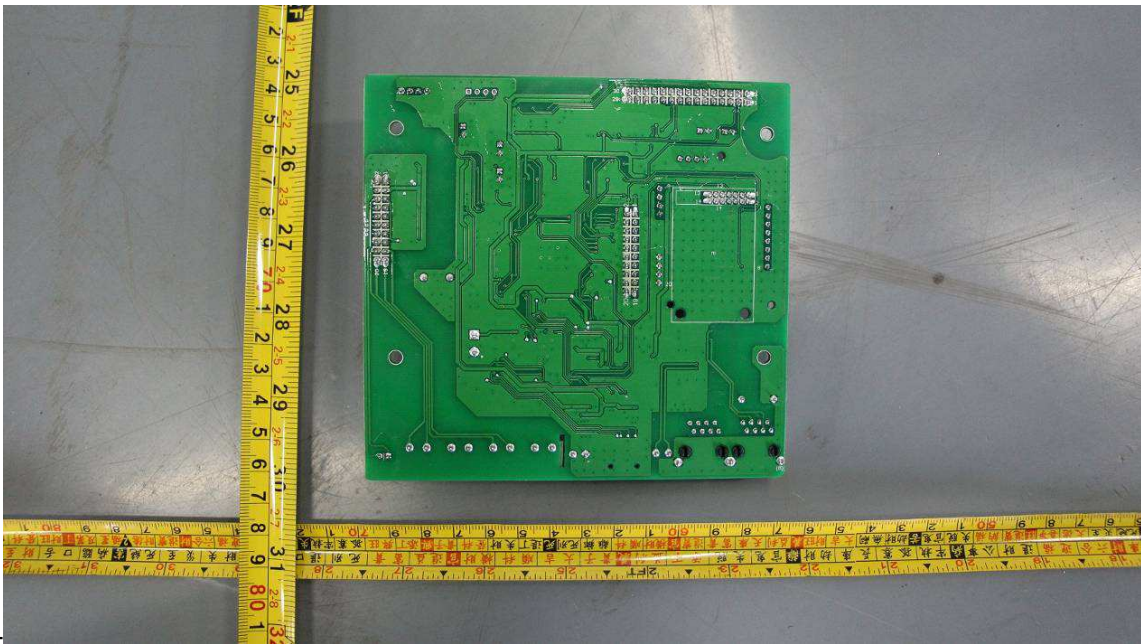


### Display board \_component side view

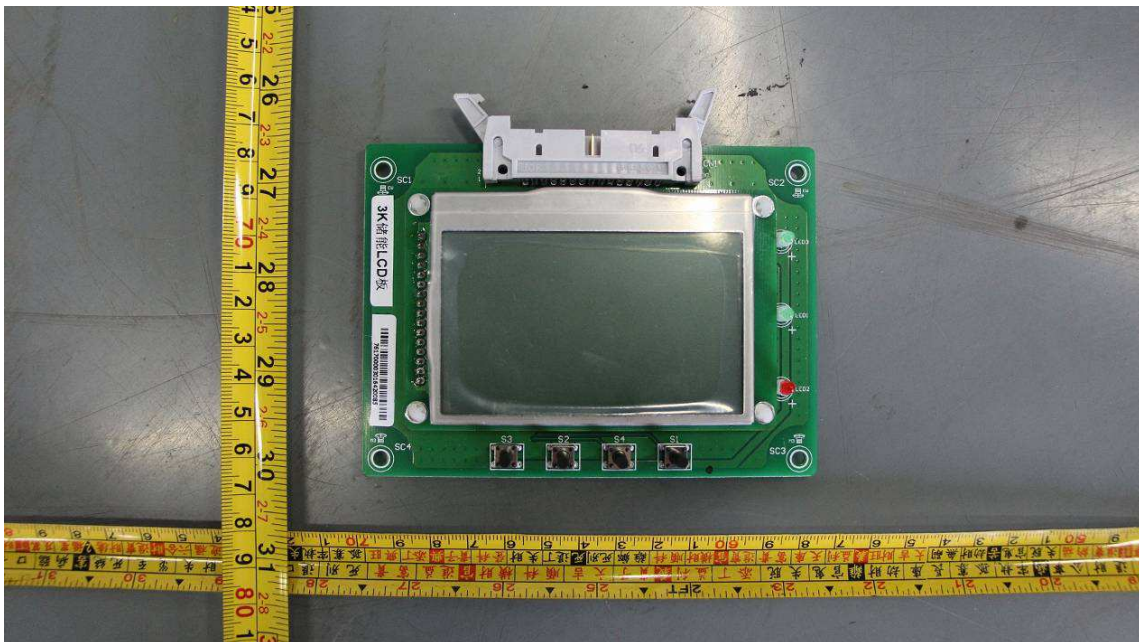



Display board\_Solder side view

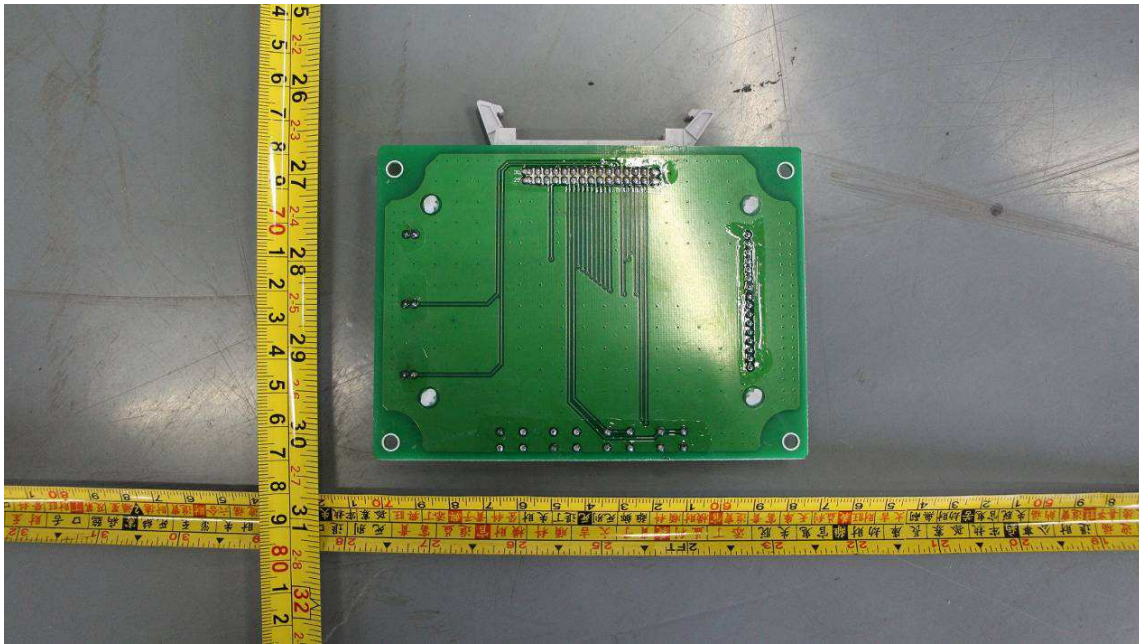

# Annex 3

## Test equipment list

**Test location: Bureau Veritas Shenzhen Co., Ltd. Dongguan Branch**  
**Performed dates of test: 2017-06-07 to 2017-06-29**

Equipment	Internal No.	Manufacturer	Type	Serial No.	Last Calibration
AC Source	A7040019DG	Chroma	61512	61512000439	Monitored by Power Analyzer
AC Source	A7040020DG	Chroma	61512	61512000438	
DC Simulation Power Supply	A7040015DG	Chroma	62150H-1000S	62150EF00488	
DC Simulation Power Supply	A7040016DG	Chroma	62150H-1000S	62150EF00490	
RLC Load	A7150027DG	Qunling	ACLT-3803H	93VOO2869	
Power Analyzer	A4080002DG	YOKOGAWA	WT3000	91M210852	Jan. 06, 2017
Digital phosphor Oscilloscope	A4089001DG	Tektronix	TDS3032	B023998	Dec. 15, 2016
Digital Phosphor Oscilloscope	A4089017DG	YOKOGAWA	DL850-H-HC	91N726247	Sep. 08, 2016
Isolation voltage probe	A1490008DG	YOKOGAWA	701901	//	Oct. 13, 2016
Isolation voltage probe	A1490011DG	YOKOGAWA	701901	//	Oct. 13, 2016
Current transducer	A1060007DG	YOKOGAWA	CT200	1130700012	Nov. 29, 2016
Current transducer	A1060008DG	YOKOGAWA	CT200	1130700017	Nov. 23, 2016
Current transducer	A1060012DG	YOKOGAWA	CT200	1130700018	Nov. 23, 2016